

$G1/8 \sim G1/2$

- Высокая пропускная способность
- Ресурс более 50 млн. циклов
- Низкая потребляемая мощность: 1.5 Вт (0.75 Вт у исполнения с энергосберегающей схемой)
- Возможно применение для вакуума до -101.2 кПа (в исполнении с внешним пилотным управлением)
- Легкое переключение с Н.О. на Н.З. и обратно





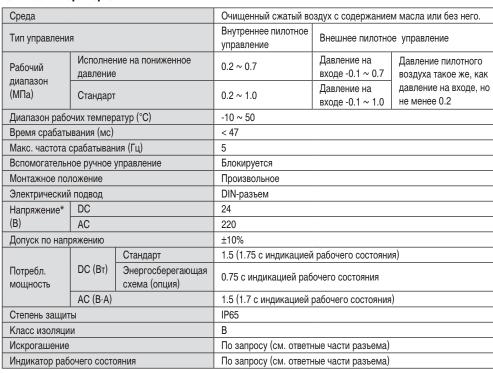

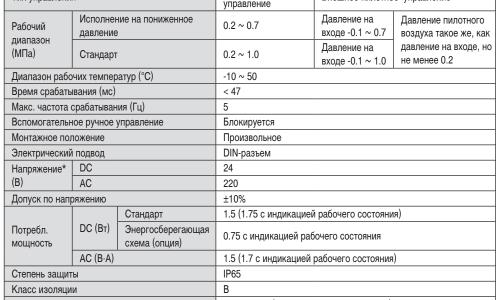

Номер для заказа

Номер для заказа				V	Присоед.	Номинальный	Date	
Давление до 0.7 МПа		Стандарт		Тип	Условное обозначение	резьба	расход воздуха	Вес (г)
24 V DC	220 V AC	24 V DC	220 V AC		ооозпачение	G	(норм. л/мин)	(1)
VP342-5YOD1-01FA	VP342-4YOD1-01FA	VP342K-5YOD1-01FA	VP342K-4YOD1-01FA	3/2 H.3./H.O.		G1/8	800	185
VP342-5YOD1-02FA	VP342-4YOD1-02FA	VP342K-5YOD1-02FA	VP342K-4YOD1-02FA	с внутренним		G1/4	1000	181
VP542-5YOD1-03FA	VP542-4YOD1-03FA	VP542K-5YOD1-03FA	VP542K-4YOD1-03FA	пилотным		G3/8	2200	277
VP742-5YOD1-04FA	VP742-4YOD1-04FA	VP742K-5YOD1-04FA	VP742K-4YOD1-04FA	управлением	K P	G1/2	3600	503
VP342R-5YOD1-01FA	VP342R-4YOD1-01FA	VP342RK-5YOD1-01FA	VP342RK-4YOD1-01FA	3/2 H.3./H.O.	A	G1/8	800	185
VP342R-5YOD1-02FA	VP342R-4YOD1-02FA	VP342RK-5YOD1-02FA	VP342RK-4YOD1-02FA	с внешним		G1/4	1000	181
VP542R-5YOD1-03FA	VP542R-4YOD1-03FA	VP542RK-5YOD1-03FA	VP542RK-4YOD1-03FA	пилотным		G3/8	2200	277
VP742R-5YOD1-04FA	VP742R-4YOD1-04FA	VP742RK-5YOD1-04FA	VP742RK-4YOD1-04FA	управлением	^	G1/2	3600	503

Монтаж на многоместной плите - по запросу






Конструкция

Спецификация

Поз.	Наименование	Материал
1	Корпус	Алюминий
2	Адаптер	Полимер
3	Концевая пластина	Полимер
4	Поршень	Полимер
5	Золотник	Алюминий, HNBR
6	Стопор	Полимер
7	Пружина	Сталь нержавеющая

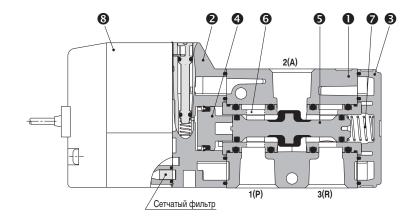

Запасные части

Наименование	Номер для заказа		
Паименование	Давление до 0.7 МПа	Давление до 1.0 МПа	
Запасной элемент включения с катушкой электромагнита, 24 V DC	V212-5	V212K-5	
Запасной элемент включения с катушкой 220 V AC	V212-4	V212K-4	

Номер для заказа ответных частей разъема (заказываются отдельно)

Номер для зака	за	Наименование	
24 V DC 220 V AC		Паименование	
X31		Без индикатора рабочего состояния и искрогашения	
V200-63-5-05 V200-63-7-02		С индикатором рабочего состояния и искрогашением	

Схема подключения на стр. 201

Крепежный угольник

Наименование	Типоразмер	Номер для заказа
	VP342	VP300-227-1A
Крепежный угольник (2 винта в комплекте)	VP542	VP500-227-1A
KOMIDIEKTE)	VP742	VP700-227-1A

Переключение функции

Поворотом концевой пластины достигается простое переключение из функции «нормально закрытый» на функцию «нормально открытый».

Ввод	Р	Α	R
Функция Н.З.	Подвод сжатого воздуха	Подключение потребителя	Деаэрация
Функция Н.О.	Деаэрация	Подключение потребителя	Подвод сжатого воздуха

Функция «Нормально закрытый» Метка «N.C.»


Функция «Нормально открытый»

Метка «N.O.»


Размеры

VP300

С залитым кабелем

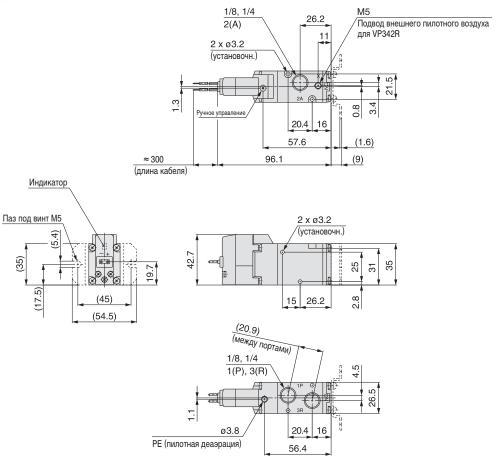

С DIN-разъемом

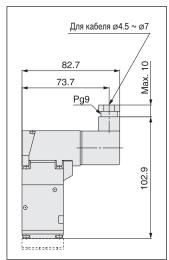







Размеры

VP500



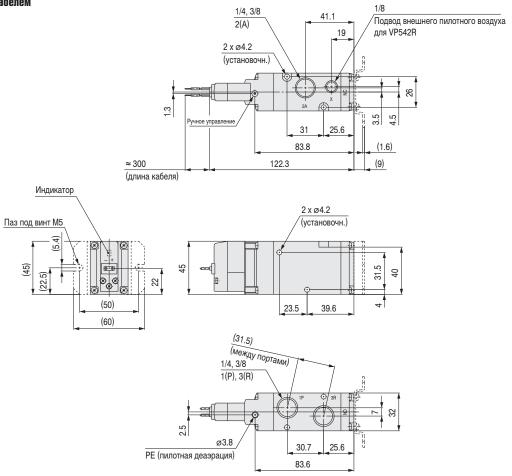



С DIN-разъемом

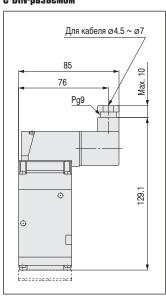


Размеры

VP700 С залитым кабелем

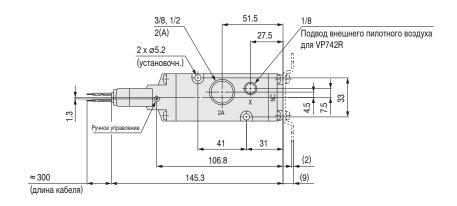

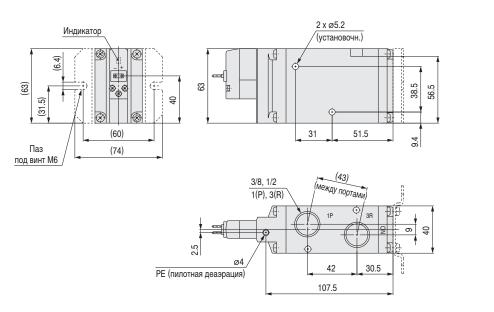

С DIN-разъемом

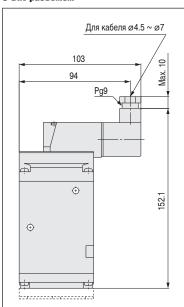

3/2 пневмораспределитель с пневмоуправлением

VPA300/500/700

G1/8 ~ G1/2

- Высокая пропускная способность
- Возможно применение для вакуума
- Легкое переключение с Н.О. на Н.З. и обратно

Технические характеристики

Среда		Очищенный сжатый воздух с содержанием масла или без него.	
Тип управления		Пневматическое	
Рабочий диапазон	Стандартный	0.2 ~ 1.0	
давления (МПа) Вакуум		-0.1 ~ 0.2	
Давление пилотного в	оздуха (МПа)	Такое же, как давление на входе, но не менее 0.2	
Диапазон рабочих тем	иператур (°C)	-10 ~ 50	
Монтажное положение	e	Произвольное	



Номер для заказа

Номер для заказа*	Тип	Условное обозначение	Присоед. резьба	Номинальный расход воздуха (норм. л/мин)	Bec (r)		
VPA342-1-01FA	0/0110	(A)	G1/8	880	118		
VPA342-1-02FA	3/2 H.3.	3 1 (R)(P)	G1/4	980	114		
VPA542-1-03FA	с пневматическим управлением		G3/8	2256	229		
VPA742-1-04FA	управлением		G1/2	3924	484		
VPA342-1-01FB	0/0110	(A)	G1/8	880	118		
VPA342-1-02FB	3/2 H.O. с пневматическим управлением		G1/4	980	114		
VPA542-1-03FB		2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	G3/8	2256	229		
VPA742-1-04FB	управлением	(Ř)(P)	G1/2	3924	484		

Монтаж на индивидуальную или многосекционную плиту – по запросу

Крепежный угольник

Наименование	Типоразмер	Номер для заказа
V	VPA342	VP300-227-1A
Крепежный угольник (2 винта в комплекте)	VPA542	VP500-227-1A
(2 BUHTA B KOMIDIEKTE)	VPA742	VP700-227-1A


Конструкция

Спецификация


Поз.	Наименование	Материал
1	Корпус	Алюминий
2	Адаптер	Алюминий
3	Концевая пластина	Полимер
4	Поршень	Полимер
5	Золотник	Алюминий, HNBR
6	Стопор	Полимер
7	Пружина	Сталь нержавеющая

Порядок переключения с Н.З. на Н.О. такой же, как у пневмораспределителя VP300/500/700

Стандартное исполнение

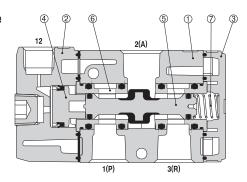

Для вакуума

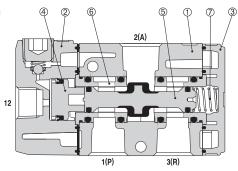


^{*} Для заказа распределителя на вакуум в номере для заказа добавляется символ «V». Пример: VPA342V-1-02FA





3/2 пневмораспределитель с пневмоуправлением VPA300/500/700

Размеры

VPA300

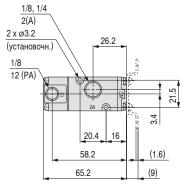

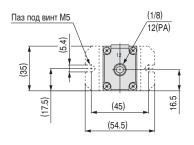

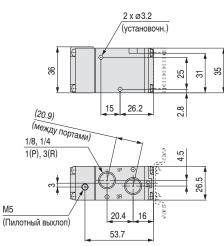

VPA500



(1/8)

(50)


(60)

12(PA)


Паз под винт М5

22.5

(45)

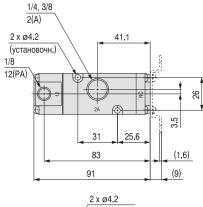


(установочн.)

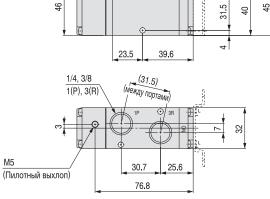

3/2 пневмораспределитель с пневмоуправлением **VPA300/500/700**

Размеры

VPA700

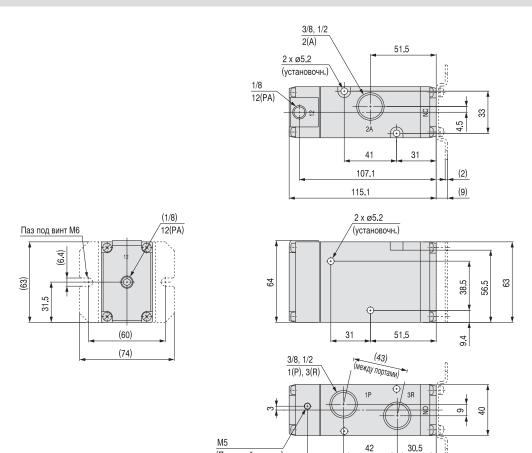

(Пилотный выхлоп)

100.8

3 Port Solenoid Valve

Reduced power consumption:

0.55 W [With power saving circuit]


1.55 W [Standard]

(Conventional: 2.0 W) * with DC light

(Conventional: 2.0 W)

Power consumption reduced by power saving circuit.

Power consumption is decreased by approx. 1/3 by reducing the wattage required to hold the valve in an energized state. (effective energizing time is over 40 ms at 24 VDC.) Refer to electrical power waveform as shown below.

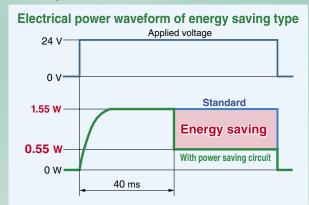



Built-in full-wave rectifier (AC)

Noise reduction

Noise is considerably reduced by changing it to DC mode via a full-wave rectifier.

Reduced apparent power Conventional: 5.6 va → 1.55 va


Longer life expectancy: **50 million** cycles or more

(Conventional: 20 million cycles) * Based on SMC test conditions

Built-in strainer in the pilot valve

Unexpected troubles due to foreign matter can be prevented.

Note) Be sure to mount an air filter on the inlet side.

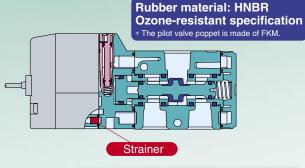








Series VP300/500/700

RoHS compliant SN

Model Selection by Operating Conditions 1




Solenoid Valve: Single Unit

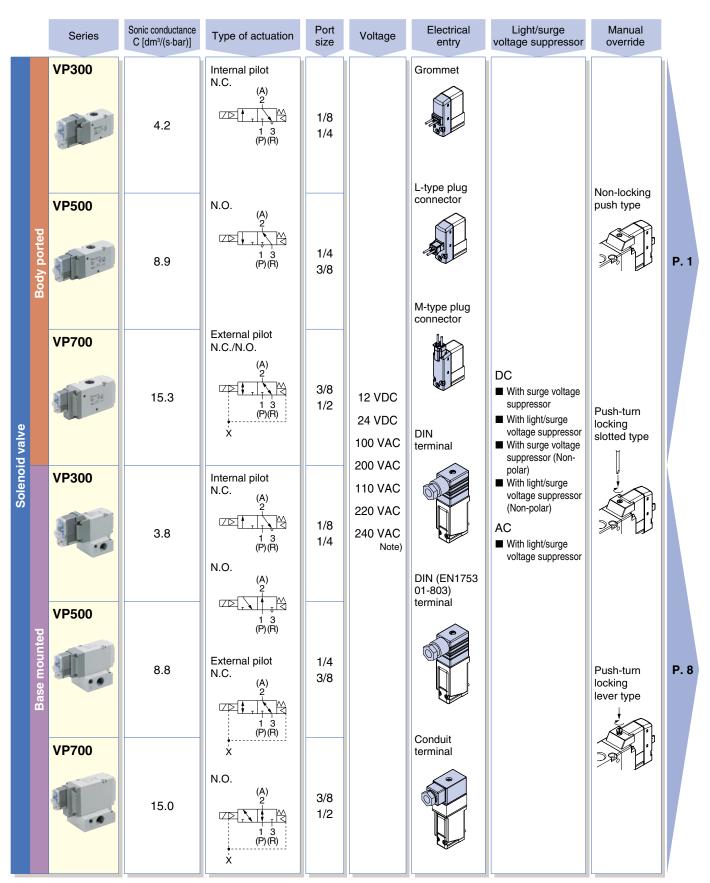

Note) Only DIN and conduit terminal types can be set for AC mode.

Model Selection by Operating Conditions 2

Solenoid Valve: Manifold

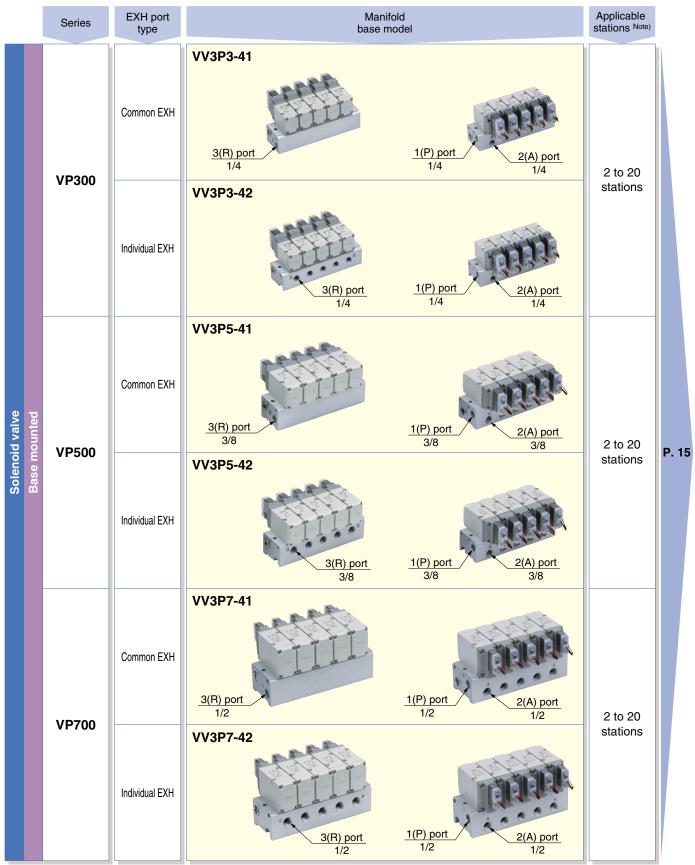

Note) Supply pressure to 1(P) ports and exhaust air from 3(R) ports on both sides for 10 stations or more.



Model Selection by Operating Conditions ③


Air Operated Valve: Single Unit

		Series	Sonic conductance C [dm³/(s·bar)]	Type of actuation	Port size	Voltage	Electrical entry	Light/surge voltage suppressor	Manual override	
		VPA300	4.2	N.C. (A) 2 12 1 3 (P)(R)	1/8 1/4					
	Body ported	VPA500	8.9	N.O. (A) 2 12 1 3 (P)(R)	1/4 3/8					P. 25
ted valve		VPA700	15.3	For vacuum N.C./N.O. (A) 2 12 1 3 (P)(R)	3/8 1/2					
Air operated valve		VPA300	3.8	N.C. (A) 2 12 1 3 (P)(R) N.O.	1/8 1/4	_	_	_	_	
	Base mounted	VPA500	8.8	12 1 3 (P)(R) For vacuum N.C. (A) 2	1/4 3/8					P. 30
		VPA700	15.0	N.O. (A) (B) (C) (A) (C) (C	3/8 1/2					

Model Selection by Operating Conditions 4



Air Operated Valve: Manifold

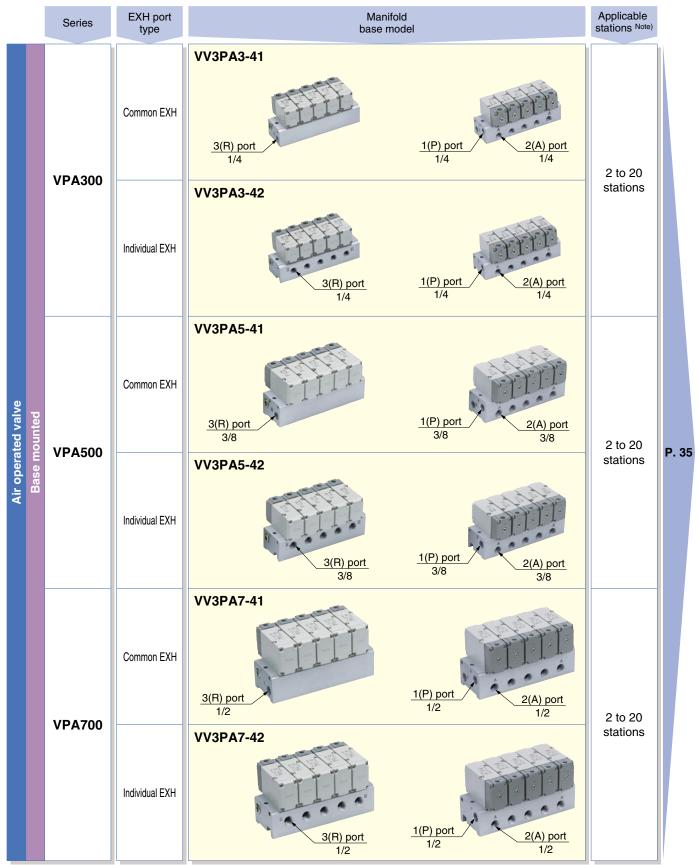

Note) Supply pressure to 1(P) ports and exhaust air from 3(R) ports on both sides for 10 stations or more.


Rubber Seal 3 Port/Pilot Poppet Type **Body Ported/Single Unit**

Series VP300/500/700

How to Order



Note) Only DIN and conduit terminal types are available for AC mode. Refer to the electrical entry for details.

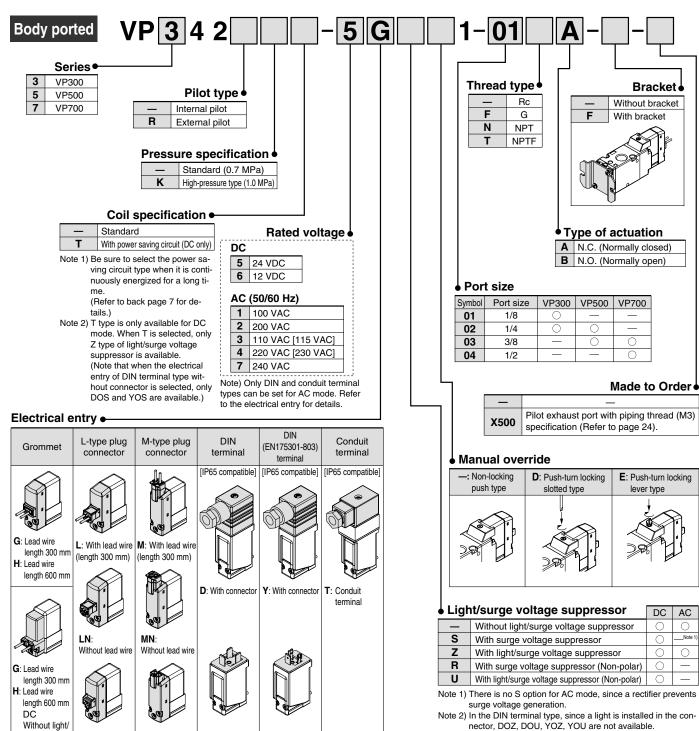

Note 1) LN and MN types are with 2 sockets.

LO: Without connector

surge voltage

suppressor


Note 2) Refer to back page 4 when different length of lead wire for L/M-type plug connector is required.

Without connector

Without connector

Note 3) Refer to back page 5 for details on the DIN (EN175301-803) terminal.

Without connector



When using the surge voltage suppressor type, residual voltage will remain. Refer to back page 7 for details.

AC



Note 4) The AC mode of G, H, L and M types are not CE compliant.

Pilot Poppet Type Body Ported/Single Unit Series VP300/500/700

Low power consumption 1.5 W (DC) Possible to use as either a selector or divider valve Possible to change from N.C. to N.O.



• Refer to back page 8 for changing the type of actuation.

Possible to use in vacuum applications

Up to -100 kPa







External Pilot

Use external pilot type in the following cases:

- For vacuum or for low pressure: 0.2 MPa
- · Please consult SMC for use in a vacuum hold application.
- When having P port downsized in diameter
- · When using A port as the atmospheric releasing port, e.g. air blower.



Made to Order (Refer to page 24 for details.)

X500

Pilot exhaust port with piping thread (M3) specification

Specifications

FI!		A !	
Fluid		Air	
Type of actuation		N.C. or N.O. (Convertible)	
Internal pilot	Standard	0.2 to 0.7	
Operating pressure range (MPa)	High-pressure type	0.2 to 1.0	
External milet	Standard	-100 kPa to 0.7	
External pilot Operating pressure range (MPa)	High-pressure type	-100 kPa to 1.0	
Operating pressure range (MFa)	Pilot pressure range	Same as operating pressure (Min. 0.2 MPa)	
Ambient and fluid temperat	ure (°C)	-10 to 50 (No freezing)	
Max. operating frequency (I	Hz)	5	
		Non-locking push type	
Manual override		Push-turn locking slotted type	
		Push-turn locking lever type	
Pilot exhaust type		Individual exhaust	
Lubrication		Not required	
Mounting orientation		Unrestricted	
Impact/Vibration resistance	(m/s²) Note)	300/50	
Enclosure		Dust-tight (IP65 for D, Y, T)	

Note) Impact resistance:

No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states

every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Solenoid Specifications

Electrical entry			Grommet (G), (H) L-type plug connector (L)	DIN terminal (D) DIN (EN175301-803) terminal (Y)	
Liectrical entry			M-type plug connector (M)	Conduit terminal (T)	
			G, H, L, M	D, Y, T	
Coil rated voltage (V)	DC		24,	, 12	
Con rateu voitage (v)	AC	(50/60 Hz)	100, 110, 20	00, 220, 240	
Allowable voltage fluctuation			±10% of rat	ted voltage*	
D (140)	DC	Standard	1.5 (With light: 1.55)	1.5 (With light: 1.75)	
Power consumption (W)	DC	With power saving circuit	0.55 (With light only)	0.75 (With light only)	
		100 V			
		110 V			
		[115 V]			
Apparent power	AC	200 V	1.55 (With light: 1.65)	1.55 (With light: 1.7)	
(VA) ^{Note 1)}		220 V			
		[230 V]			
		240 V			
Surge voltage suppr	Surge voltage suppressor		Diode (Non-polar type: Varistor)		
Indicator light			LED (Neon bulb is used for AC mode of D, Y, T.)		

Note 1) It is in common between 110 VAC and 115 VAC, and between 220 VAC and 230 VAC.

Note 2) Allowable voltage fluctuation is -15% to +5% of the rated voltage for 115 VAC or 230 VAC.

Note 3) Since voltage drops due to the internal circuit in S, Z, T types (with power saving circuit), the allowable voltage fluctuation should be within the following range.

24 VDC: -7% to +10% 12 VDC: -4% to +10%

Response Time

		Response time ms (at 0.5 MPa)						
Model	Pressure specifications	Without light/surge	With light/surge voltage suppressor		AC			
		voltage suppressor	S, Z type	R, U type	AO			
VP342	Standard (0.2 to 0.7)	13 or less	38 or less	16 or less	38 or less			
VF342	High-pressure type (0.2 to 1.0)	17 or less	42 or less	20 or less	42 or less			
VP542	Standard (0.2 to 0.7)	14 or less	39 or less	17 or less	39 or less			
VF342	High-pressure type (0.2 to 1.0)	18 or less	43 or less	21 or less	43 or less			
VP742	Standard (0.2 to 0.7)	19 or less	44 or less	22 or less	44 or less			
VF/42	High-pressure type (0.2 to 1.0)	22 or less	47 or less	25 or less	47 or less			

Note) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20°C, at rated voltage)



Flow Characteristics/Mass

Model	Port size	$1 \leftrightarrow 2 \ (P \leftrightarrow A)$			$2 \leftrightarrow 3 (A \leftrightarrow R)$			→ R)	Mass (g) Note 1)		
Model		C [dm³/(s·bar)]	b	Cv	Q [d/min] (ANR)Note 2)	C [dm³/(s·bar)]	b	Cv	Q [l/min] (ANR)Note 2)	Grommet	DIN terminal
VP342	1/8	3.5	0.26	0.8	868	3.6	0.26	0.9	893	149	185
VP342	1/4	4.2	0.22	1.0	1018	4.2	0.23	1.0	1023	145	181
VP542	1/4	7.9	0.21	1.8	1903	7.2	0.27	1.8	1797	249	285
VP342	3/8	8.9	0.16	2.2	2085	8.9	0.20	2.1	2132	241	277
VP742	3/8	11.9	0.21	2.7	2867	11.8	0.20	2.7	2826	484	520
VP/42	1/2	15.1	0.21	3.6	3637	15.3	0.22	3.7	3707	467	503

Note 1) Values without bracket

Note 2) These valves have been calculated according to ISO6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

Application Example

(1) Blow-off valve



External pilot

(2) Pressure release valve




External pilot

(3) Selector valve




External pilot

(4) Valve for vacuum




(5) Divider valve




(6) Single-acting cylinder drive



(7) Double-acting cylinder drive



(8) Double-acting cylinder drive (Exhaust centre)




Construction

Body ported

JIS symbol

Pilot type	N.C.	N.O.	
Internal pilot	(A) 2 1 3 (P)(R)	(A) 2 1 3 (P)(R)	
External pilot	✓▷↓, x	(A) 2 1 1 3 (P)(R)	

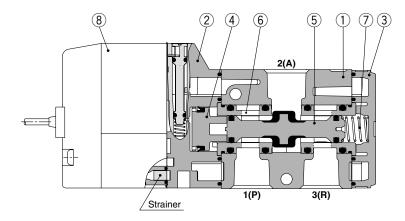

Component Parts

Component i arts									
No.	Description	Material	Note						
1	Body	Aluminum die-casted	White						
2	Adapter plate	Resin	Grey						
3	End plate	Resin	White						
4	Piston	Resin							
5	Spool valve	Aluminum/HNBR							
6	Retainer	Resin							
7	Spring	Stainless steel							

Bracket Assembly Part No.

Description	Model	Part no.
	VP342	VP300-227-1A
Bracket	VP542	VP500-227-1A
(With 2 screws)	VP742	VP700-227-1A

Replacement Parts

No.	Description	Description Part no.	
8	Pilot valve assembly	Refer to "How to Order Pilot Valve Assembly" on page 4.	Built-in strainer




Pilot Poppet Type Body Ported/Single Unit Series VP300/500/700

How to Order Pilot Valve Assembly



When only the pilot valve assembly is replaced, it is not possible to change from V211 (Grommet or L/M-type) to V212 (DIN or Conduit type), or vice versa.

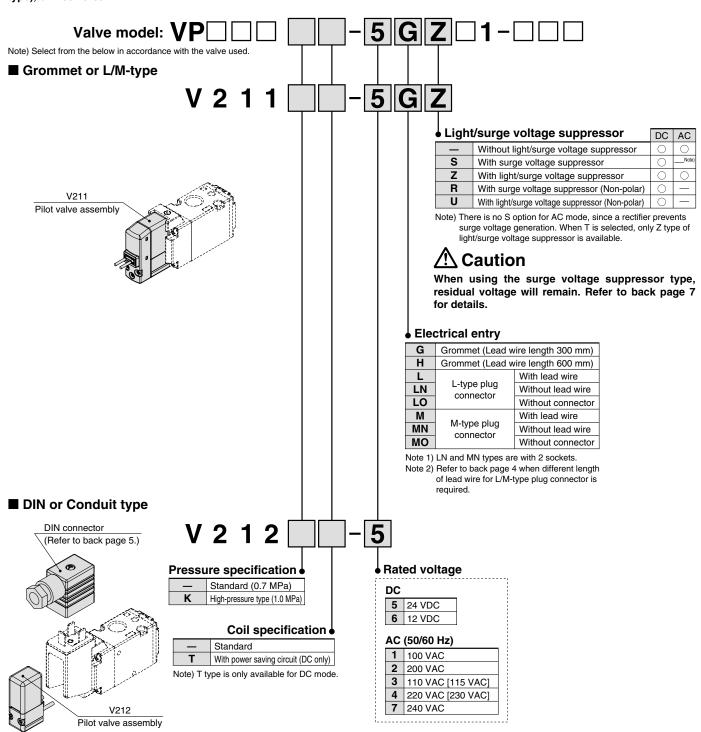

⚠ Caution

For V212 (DIN or Conduit type), the coil specification and voltage (including light/surge voltage suppressor) cannot be changed by changing the pilot valve assembly.




Tightening torque of the pilot valve assembly mounting screw M2.5: 0.32 N⋅m




Series VP300/Body Ported/Dimensions


Grommet (G)

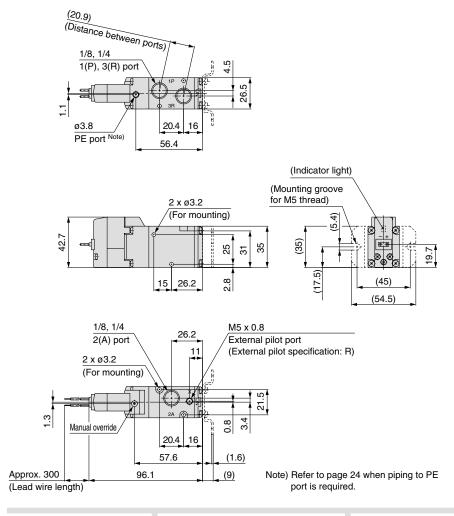


Grommet (G) DC without light/surge voltage suppressor

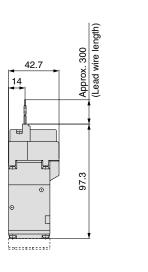


L-type plug connector (L)




M-type plug connector (M)

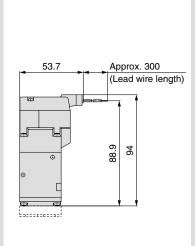

DIN terminal (D, Y)

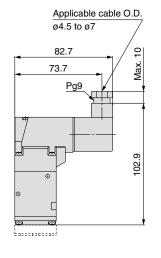

Conduit terminal (T)

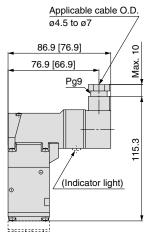


[] valves: Without indicator light




Pilot Poppet Type Body Ported/Single Unit Series VP300/500/700


Series VP500/Body Ported/Dimensions

Grommet (G)

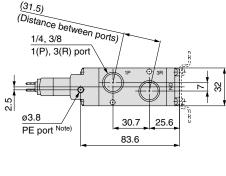


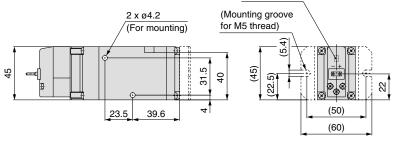


(Indicator light)

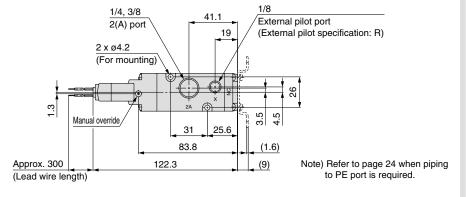


Grommet (G) DC without light/surge voltage suppressor

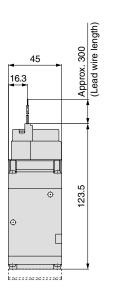


L-type plug connector (L)




M-type plug connector (M)

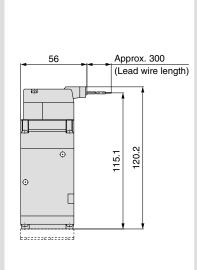

DIN terminal (D, Y)

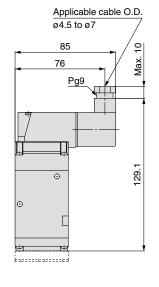

Conduit terminal (T)

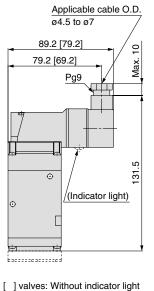



] valves. Without indicator light




Series VP700/Body Ported/Dimensions

Grommet (G)

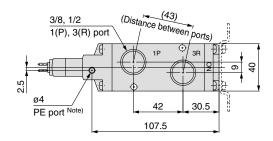

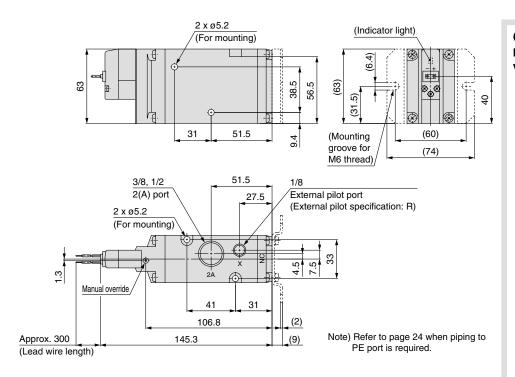


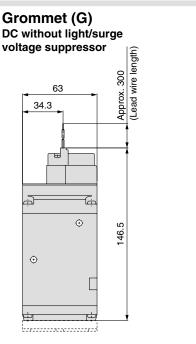

blug connector (L) 63 40.3 (Lead wire length)


 \Rightarrow


L-type

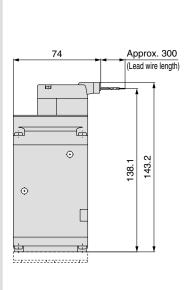

M-type

plug connector (M)

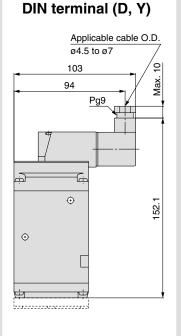

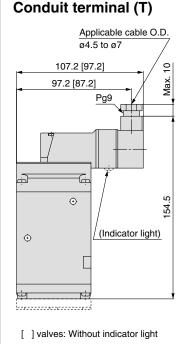

Unless otherwise indicated, dimensions are the same as Grommet (G).

中

baraaaaaaaaaaaa


Rubber Seal 3 Port/Pilot Poppet Type Base Mounted/Single Unit

Series VP300/500/700





Note) Only DIN and conduit terminal types are available for AC mode. Refer to the electrical entry for details.

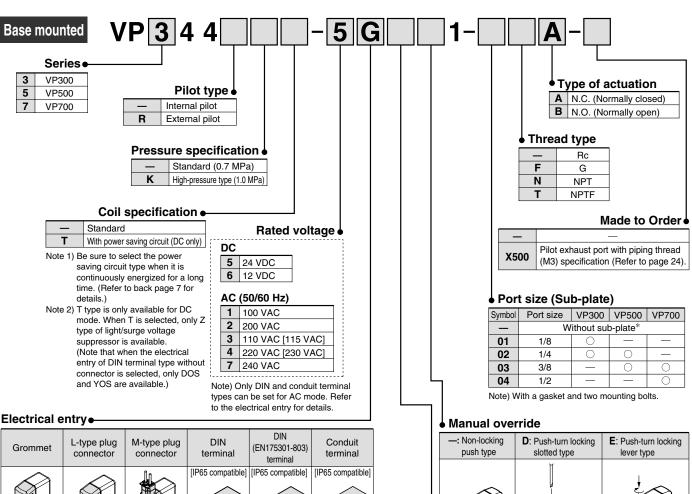


Grommet	L-type plug connector	M-type plug connector	DIN terminal	(EN175301-803) terminal	Conduit terminal
G: Lead wire length 300 mm H: Lead wire length 600 mm	L: With lead wire (length 300 mm)	M: With lead wire (length 300 mm)		[IP65 compatible] Y: With connector	[IP65 compatible] T: Conduit
G: Lead wire length 300 mm	LN: Without lead wire	MN: Without lead wire			terminal
H: Lead wire length 600 mm DC Without light/ surge voltage suppressor	LO: Without connector	MO: Without connector	DO: Without connector	YO: Without connector	

Note 1) LN and MN types are with 2 sockets.

Note 2) Refer to back page 4 when different length of lead wire for L/M-type plug connector is required.

Note 3) Refer to back page 5 for details on the DIN (EN175301-803) terminal.

Note 4) The AC mode of G, H, L and M types are not CE compliant.



Light	/surge voltage suppressor	DC	AC
• <u> </u>	DC	AC	
_	Without light/surge voltage suppressor	0	0
S	With surge voltage suppressor	0	Note 1)
Z	With light/surge voltage suppressor	0	0
R	With surge voltage suppressor (Non-polar)	0	_
U	With light/surge voltage suppressor (Non-polar)	0	

Note 1) There is no S option for AC mode, since a rectifier prevents surge voltage generation.

Note 2) In the DIN terminal type, since a light is installed in the connector, DOZ, DOU, YOZ, YOU are not available.

⚠ Caution

When using the surge voltage suppressor type, residual voltage will remain. Refer to back page 7 for details.



Low power consumption 1.5 W (DC)
Possible to use as either a
selector or divider valve
Possible to change from
N.C. to N.O.



 Refer to back page 8 for changing the type of actuation.

Possible to use in vacuum applications

Up to -100 kPa



Series VP300



Series VP500



External Pilot

Use external pilot type in the following cases:

- For vacuum or for low pressure 0.2 MPa or less
- Please consult with SMC for use in a vacuum hold application.
- When having P port downsized in diameter
- When using A port as the atmospheric releasing port, e.g. air blower
- If manifold, external pilot piping can be centralized in manifold base.



Made to Order (Refer to page 24 for details.)

X500

Pilot exhaust port with piping thread (M3) specification

Specifications

Fluid		Air	
Type of actuation		N.C. or N.O. (Convertible)	
Internal pilot	Standard	0.2 to 0.7	
Operating pressure range (MPa)	High-pressure type	0.2 to 1.0	
F-4	Standard	-100 kPa to 0.7	
External pilot Operating pressure range (MPa)	High-pressure type	-100 kPa to 1.0	
Operating pressure range (MFa)	Pilot pressure range	Same as operating pressure (Min. 0.2 MPa)	
Ambient and fluid temperat	ure (°C)	-10 to 50 (No freezing)	
Max. operating frequency (I	Hz)	5	
Manual override		Non-locking push type Push-turn locking slotted type	
manaar ovorriao		Push-turn locking lever type	
Pilot exhaust type		Individual exhaust	
Lubrication		Not required	
Mounting orientation		Unrestricted	
Impact/Vibration resistance	(m/s²) Note)	300/50	
Enclosure		Dust-tight (IP65 for D, Y, T)	

Note) Impact resistance:

No malfunction occurred when tested in both the axial and right angle directions of main valve and armature (tested in both energized and de-energized states).

(Values at the initial period).

Vibration resistance: No malfunction occurred when tested in a one-sweep test between 45 and 2000

Hz, in both the axial and right angle directions of main valve and armature (tested in both energized and de-energized states). (Values at the initial period).

Solenoid Specifications

Electrical entry			Grommet (G), (H) L-type plug connector (L) M-type plug connector (M)	DIN terminal (D) DIN (EN175301-803) terminal (Y) Conduit terminal (T)	
			G, H, L, M	D, Y, T	
0 11 1 11 11 DC			24,	12	
Coil rated voltage (V)	AC	(50/60 Hz)	100, 110, 20	00, 220, 240	
Allowable voltage fluctuation			±10% of rated	d voltage Notes)	
Power consumption (W)	DC	Standard	1.5 (With light: 1.55)	1.5 (With light: 1.75)	
	ьс	With power saving circuit	0.55 (With light only)	0.75 (With light only)	
	AC	100 V			
		110 V			
		[115 V]			
Apparent power		200 V	1.55 (With light: 1.65)	1.55 (With light: 1.7)	
(VA) Notes)		220 V			
		[230 V]			
		240 V			
Surge voltage suppressor			Diode (Non-polar type: Varistor)		
Indicator light			LED (Neon bulb is used for AC mode of D, Y, T.)		

Note 1) It is in common between 110 VAC and 115 VAC, and between 220 VAC and 230 VAC.

Note 2) Allowable voltage fluctuation is -15% to +5% of the rated voltage for 115 VAC or 230 VAC.

Note 3) Since voltage drops due to the internal circuit in S, Z, T types (with power saving circuit), the allowable voltage fluctuation should be within the following range.

24 VDC: -7% to +10% 12 VDC: -4% to +10%

Response Time

		Response time ms (at 0.5 MPa)						
Model	Pressure specifications	Without light/surge	With light/surge vo	oltage suppressor	AC			
		voltage suppressor	S, Z type	R, U type	AC			
VP344	Standard (0.2 to 0.7)	13 or less	38 or less	16 or less	38 or less			
VF344	High-pressure type (0.2 to 1.0)	17 or less	42 or less	20 or less	42 or less			
VP544	Standard (0.2 to 0.7)	14 or less	39 or less	17 or less	39 or less			
VF344	High-pressure type (0.2 to 1.0)	18 or less	43 or less	21 or less	43 or less			
VP744	Standard (0.2 to 0.7)	19 or less	44 or less	22 or less	44 or less			
VF/44	High-pressure type (0.2 to 1.0)	22 or less	47 or less	25 or less	47 or less			

Note) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20°C, at rated voltage)



Pilot Poppet Type Base Mounted/Single Unit Series VP300/500/700

Flow Characteristics/Mass

Model	Port size		1 ↔ 2	2 (P ←	→ A)		2 ↔ 3	3 (A ←	→ R)	Mass (g) Note 1)
Model	Port Size	C [dm³/(s·bar)]	b	Cv	Q [l/min] (ANR)Note 2)	C [dm³/(s·bar)]	b	Cv	Q [d/min] (ANR)Note 2)	Grommet	DIN terminal
VP344	1/8	3.6	0.22	0.8	872	3.5	0.24	0.8	858	216 (149)	252 (185)
VF344	1/4	3.9	0.22	0.9	945	3.8	0.14	0.9	881	211 (149)	247 (185)
VP544	1/4	7.5	0.16	1.7	1757	7.3	0.20	1.7	1749	370 (245)	406 (281)
VF344	3/8	8.8	0.07	2.0	1967	8.8	0.13	2.0	2029	362 (245)	398 (281)
VP744	3/8	12.9	0.10	2.9	2929	13.3	0.24	3.1	3260	676 (459)	712 (495)
VF/44	1/2	14.7	0.05	3.3	3256	15.0	0.17	3.4	3534	658 (459)	694 (495)

Note 1) () valves: Values without sub-plate

Note 2) These valves have been calculated according to ISO6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

Application Example





External pilot

(2) Pressure release valve




External pilot

(3) Selector valve




External pilot

(4) Valve for vacuum




(5) Divider valve




(6) Single-acting cylinder drive



(7) Double-acting cylinder drive



(8) Double-acting cylinder drive (Exhaust centre)



Construction

Base mounted

JIS symbol


0.0 0 ,0		
Pilot type	N.C.	N.O.
Internal pilot	(A) 2	(A) 2
	1 3 (P)(R)	1 3 (P)(R)
External pilot	(A) 2 1 3 (P)(R)	(A) 2 1 3 (P)(R)

Component Parts


No.	Description	Material	Note
1	Body	Aluminum die-casted	White
2	Adapter plate	Resin	Grey
3	End plate	Resin	White
4	Piston	Resin	
5	Spool valve	Aluminum/HNBR	
6	Retainer	Resin	
7	Spring	Stainless steel	

Replacement Parts

No.	Description		Part no.		Note
INO.	Description	VP344	VP544	VP744	Note
8	Pilot valve assembly	Refer to "How to O	rder Pilot Valve Ass	embly" on page 11.	Built-in strainer
9	Gasket	VP300-217-1	VP500-217-1	VP700-217-1	HNBR
10	Sub-plate	VP300-202-□	VP500-202-□	VP700-202-□	Aluminum die-casted
_	Hexagon socket head bolt (1 pc.)	VP300-224-1 (M3 x 36)	VP500-224-1 (M4 x 46)	VP700-224-1 (M5 x 66)	For valve mounting

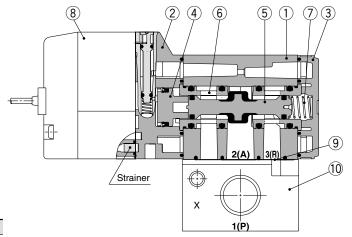

How to Order Sub-plate

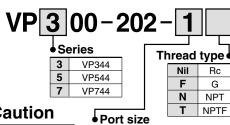

Symbol VP344

2

1/8

1/4

VP544

1/4

3/8

Caution
Tightening Torque

Tightening Torque of Mounting Screw

M3: 0.8 N·m M4: 1.4 N·m M5: 2.9 N·m



VP744


3/8

1/2

How to Order Pilot Valve Assembly



When only the pilot valve assembly is replaced, it is not possible to change from V211 (Grommet or L/M-type) to V212 (DIN or Conduit type), or vice versa.

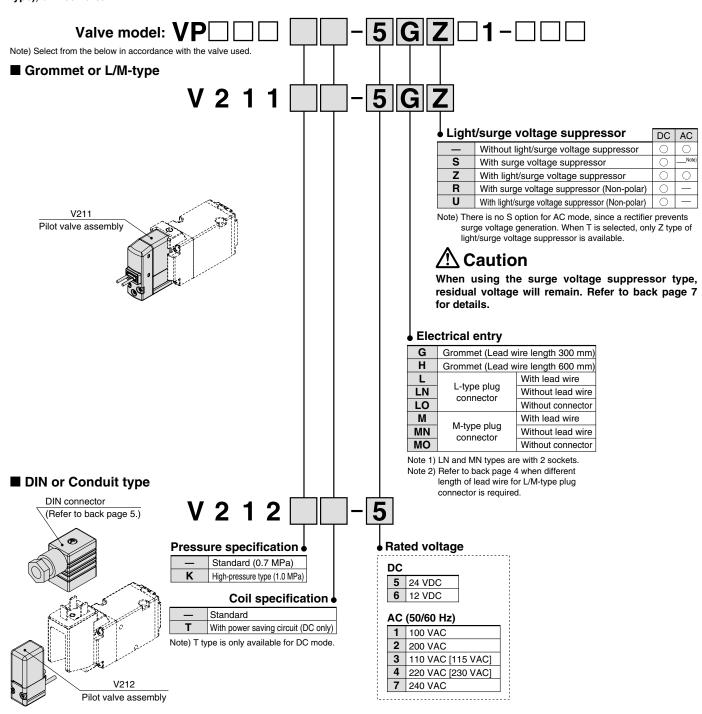

⚠ Caution

For V212 (DIN or Conduit type), the coil specification and voltage (including light/surge voltage suppressor) cannot be changed by changing the pilot valve assembly.




Tightening torque of the pilot valve assembly mounting screw M2.5: 0.32 N·m





Pilot Poppet Type Base Mounted/Single Unit Series VP300/500/700


Series VP300/Base Mounted/Dimensions


Grommet (G)

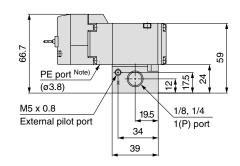


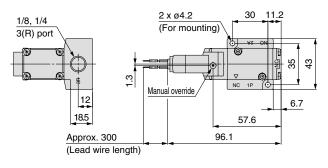






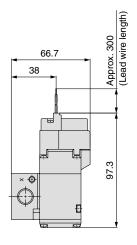




Note) Refer to page 24 when piping to PE port is


L-type plug connector (L)

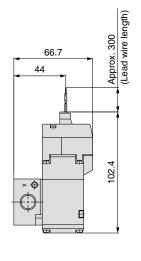


M-type plug connector (M)

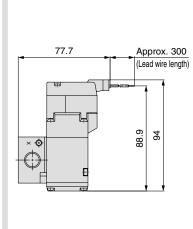

DIN terminal (D, Y)

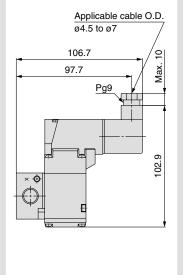

Conduit terminal (T)

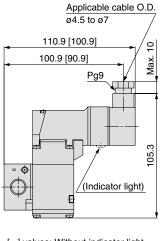



[] valves: Without indicator light





Series VP500/Base Mounted/Dimensions

Grommet (G)

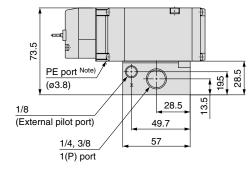

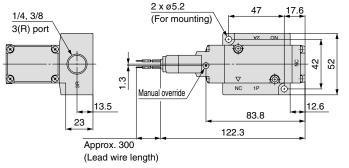




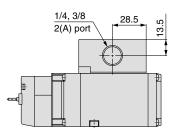


Note) Refer to page 24 when piping to PE port is required.


Grommet (G)DC without light/surge voltage suppressor

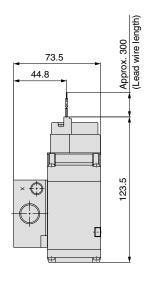


L-type plug connector (L)

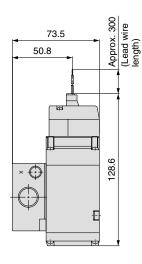


M-type plug connector (M)

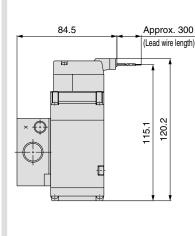

DIN terminal (D, Y)

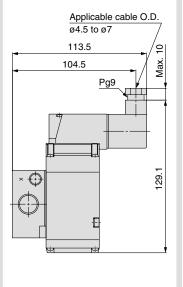

Conduit terminal (T)

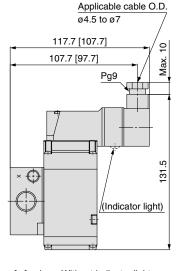


[] valves: Without indicator light





Pilot Poppet Type Base Mounted/Single Unit Series VP300/500/700


Series VP700/Base Mounted/Dimensions

Grommet (G)

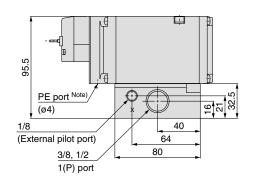

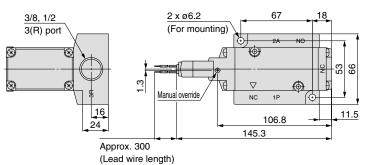




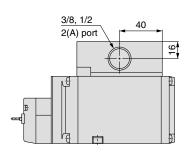


Note) Refer to page 24 when piping to PE port is required.


Grommet (G) DC without light/surge voltage suppressor

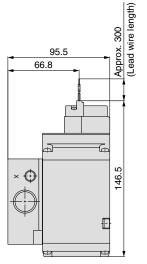


L-type plug connector (L)

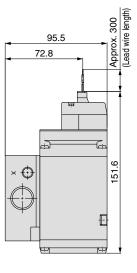


M-type plug connector (M)

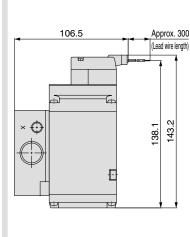

DIN terminal (D, Y)

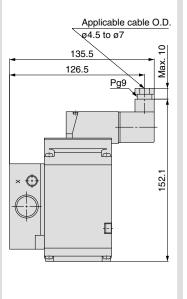

Conduit terminal (T)

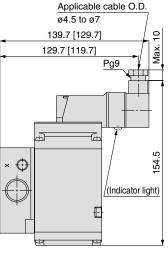


[] valves: Without indicator light




Rubber Seal/3 Port/Pilot Poppet Type Manifold Common Exhaust Type 41 / Individual Exhaust Type 42

Series VP300/500/700

How to Order Manifold

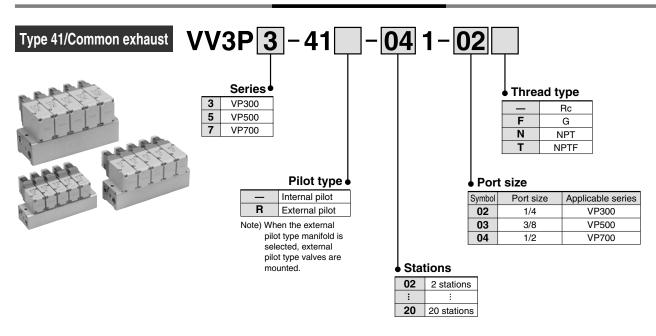

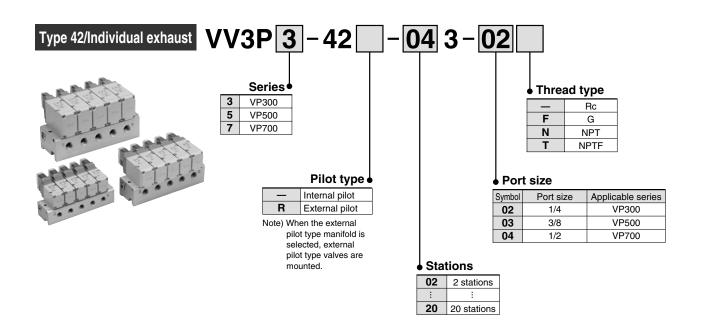


Pilot Poppet Type Common Exhaust Type 41 /Individual Exhaust Type 42 Series VP300/500/700

How to Order Valve (With a gasket and two mounting bolts)




Only DIN and conduit terminal types are available for AC mode. Refer to the electrical entry for details.

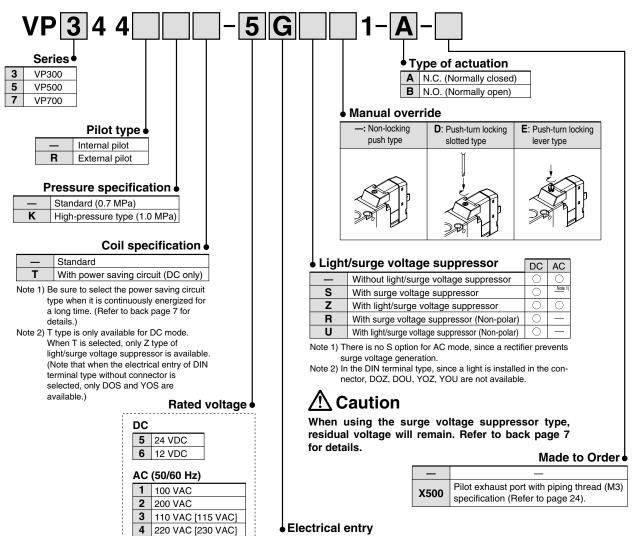

Note) Only DIN and conduit terminal types can be set for AC mode. Refer to the electrical entry for details.

7 240 VAC

♦ Electrical entry

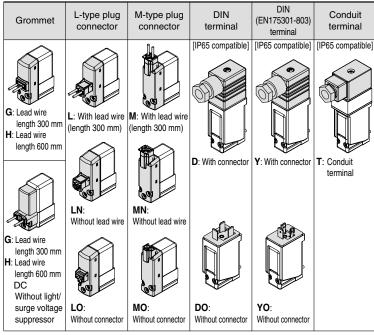

Note 1) LN and MN types are with 2 sockets.

Note 2) Refer to back page 4 when different length of lead wire for L/M-type plug connector is

Note 3) Refer to back page 5 for details on the DIN (EN175301-803) terminal.

Note 4) The AC mode of G, H, L and M types are not CE compliant.



Piping is concentrated on the base side.

All external pilots are gathered in the base.

Common external pilot port allows one piping.

2 types of exhaust ports

Common or individual exhaust type are available. For individual exhaust type, exhaust can be restricted.

Easy to change between N.C. and N.O.

Type of actuation can be easily changed from normally closed to normally open by only changing the direction of a valve and end-plate 180° .



 Refer to back page 8 for changing the type of actuation.





Manifold Specifications


		Pipir	ng specificat	ions	Applicable		Manifold base
Series	Base model	1P (SUP) port type	3R (EXH) port type	R (EXH) Port size		Applicable stations Note)	Mass: W [g] Stations: n
VP300	VV3P3-41 VV3P3-42		Common	1/4	V/D044	2 to 20 stations	W = 110n + 90
VP300	VV3P3-42		Individual	1/4	VP344	2 to 20 stations	W = 110n + 90
VP500	VV3P5-41	Common	Common	2/9	VP544	0 to 00 stations	W = 190n + 150
VP300	VV3P5-42	Common	Individual	3/8	VP544	2 to 20 stations	W = 190n + 150
VP700	VV3P7-41		Common	1/0	VP744	2 to 20 stations	W = 410n + 380
VF/00	VV3P7-42		Individual	1/2	VF/44	Z IO ZO SIAIIONS	vv = 410N + 380

Note) Supply pressure to 1(P) ports and exhaust pressure from 3(R) ports on both sides for 10 stations or more.

Manifold Option

Description	Part no.	Applicable manifold base model
Blanking plate assembly	VP300-25-1A	VV3P3
(With a gasket and two	VP500-25-1A	VV3P5
mounting bolts)	VP700-25-1A	VV3P7


How to Order Manifold Assembly (Example)

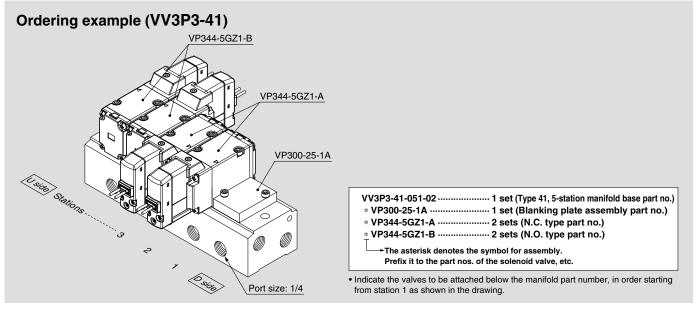





Series VP300/Dimensions

Type 41/Common exhaust: VV3P3-41□-Stations 1-02 Grommet (G)

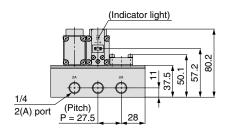

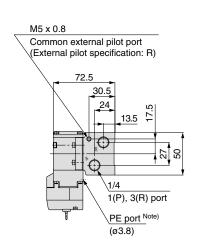


Note) Refer to page 24 when piping to PE port is required.

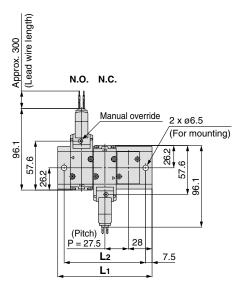


(Station n) ----- (Station 1)

Station n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L ₁	83.5	111	138.5	166	193.5	221	248.5	276	303.5	331	358.5	386	413.5	441	468.5	496	523.5	551	578.5
L2	68.5	96	123.5	151	178.5	206	233.5	261	288.5	316	343.5	371	398.5	426	453.5	481	508.5	536	563.5


Grommet (G) DC without light/surge voltage suppressor




L-type plug connector (L)




M-type plug connector (M)

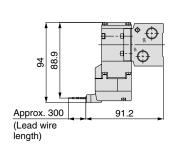

DIN terminal (D, Y)

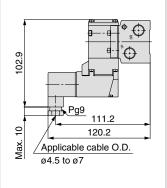

Conduit terminal (T)

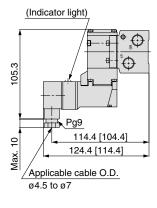


[] valves: Without indicator light




Series VP300/Dimensions


Type 42/Individual exhaust: VV3P3-42□-Stations 3-02

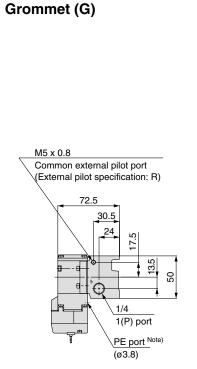

Note) Refer to page 24 when piping to PE port is required.

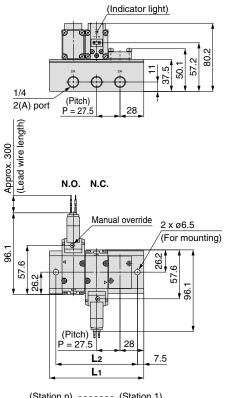


(Station n) ----- (Station 1)

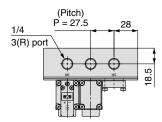


Station n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L ₁	83.5	111	138.5	166	193.5	221	248.5	276	303.5	331	358.5	386	413.5	441	468.5	496	523.5	551	578.5
L2	68.5	96	123.5	151	178.5	206	233.5	261	288.5	316	343.5	371	398.5	426	453.5	481	508.5	536	563.5

Grommet (G)


DC without light/surge voltage suppressor




L-type plug connector (L)




M-type plug connector (M)

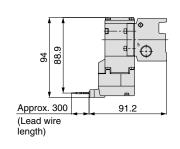

DIN terminal (D, Y)

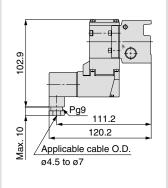

Conduit terminal (T)

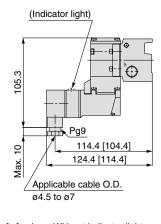



[] valves: Without indicator light




Series VP500/Dimensions

Type 41/Common exhaust: VV3P5-41□-Stations 1-03 Grommet (G)

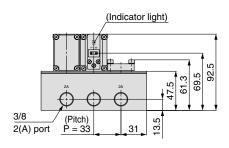

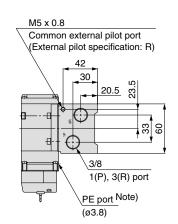

Note) Refer to page 24 when piping to PE port is required.

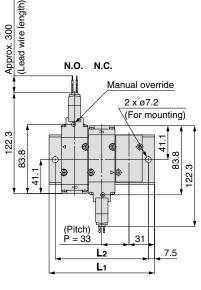


(Station n)	-	-	-	-	-	-	-	-	-	(Station	1
-------------	---	---	---	---	---	---	---	---	---	----------	---


Approx. 300 (Lead wire length)

Station n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L ₁	95	128	161	194	227	260	293	326	359	392	425	458	491	524	557	590	623	656	689
L ₂	80	113	146	179	212	245	278	311	344	377	410	443	476	509	542	575	608	641	674


L-type plug connector (L)

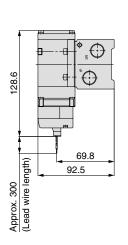

M-type plug connector (M)

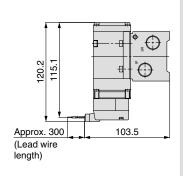

DIN terminal (D, Y)

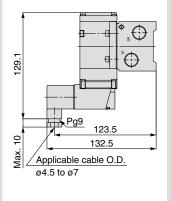

Conduit terminal (T)

Grommet (G)


suppressor

DC without light/surge voltage

 \oplus

 \odot


63.8 92.5

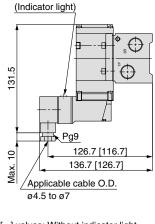


[] valves: Without indicator light




Series VP500/Dimensions

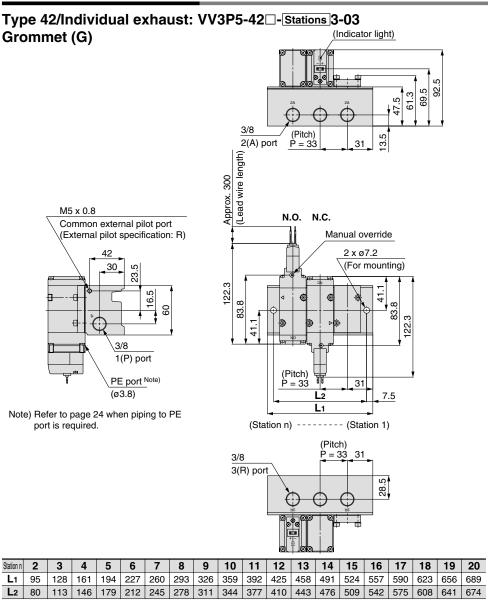


Grommet (G) DC without light/surge voltage suppressor

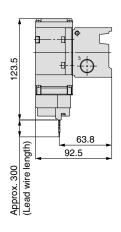


L-type plug connector (L)

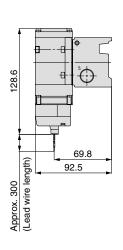


M-type plug connector (M)

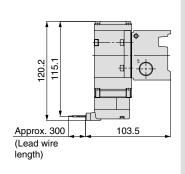

DIN terminal (D, Y)

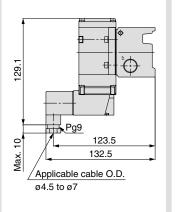


Conduit terminal (T)

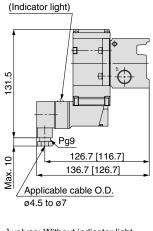


[] valves: Without indicator light


Series VP700/Dimensions

Type 41/Common exhaust: VV3P7-41□-Stations 1-04 Grommet (G)

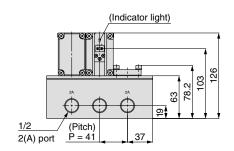

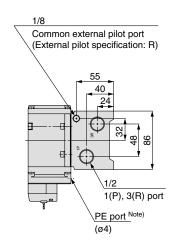


Note) Refer to page 24 when piping to PE port is required.

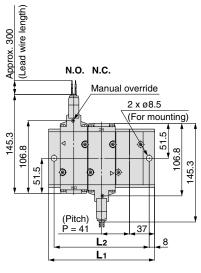


(Station n)	 (Station 1

Grommet (G) DC without light/surge voltage suppressor

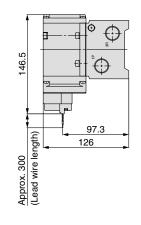


Station n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L ₁	115	156	197	238	279	320	361	402	443	484	525	566	607	648	689	730	771	812	853
L ₂	99	140	181	222	263	304	345	386	427	468	509	550	591	632	673	714	755	796	837


L-type plug connector (L)

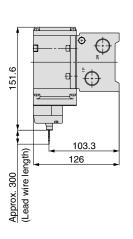


M-type plug connector (M)

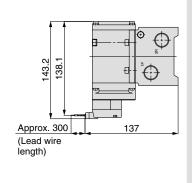

DIN terminal (D, Y)

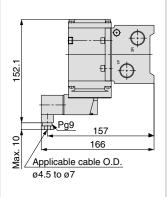


Conduit terminal (T)

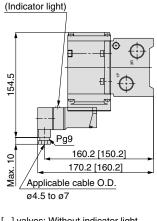


[] valves: Without indicator light




Series VP700/Dimensions

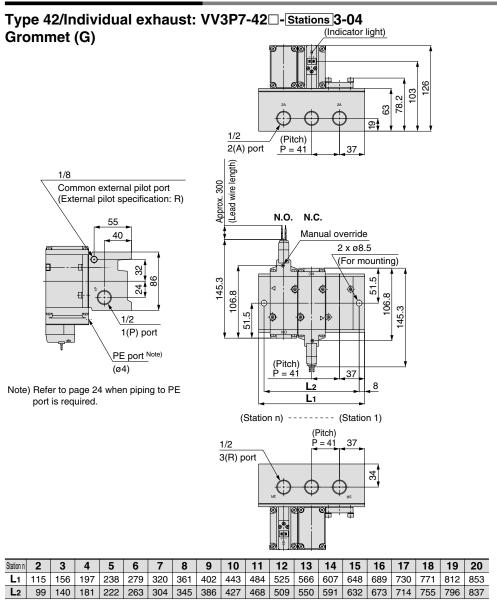


Grommet (G) DC without light/surge voltage suppressor

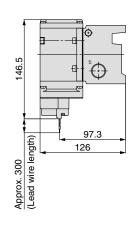


L-type plug connector (L)

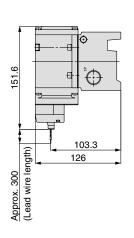


M-type plug connector (M)

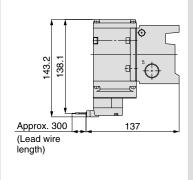

DIN terminal (D, Y)

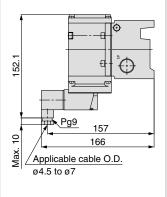

Conduit terminal (T)

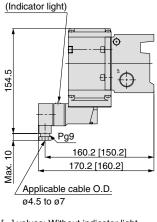

[] valves: Without indicator light



Series VP300/500/700 Made to Order




Please contact SMC for detailed dimensions, specifications, and lead times.

1 Pilot Exhaust Port with Piping Thread (M3) Specification


In this specification, piping to the pilot exhaust port (PE port) is available when the valve is used in an environment where the exhaust from the pilot valve is not allowable, or intrusion of ambient dust should be prevented.

How to Order Valve



Entry is the same as standard products.

The specifications, performance and external dimensions are the same as those of standard models.

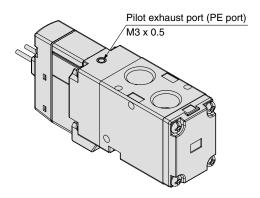


3 Port/Air Operated Valve **Body Ported/Single Unit**

Series VPA300/500/700





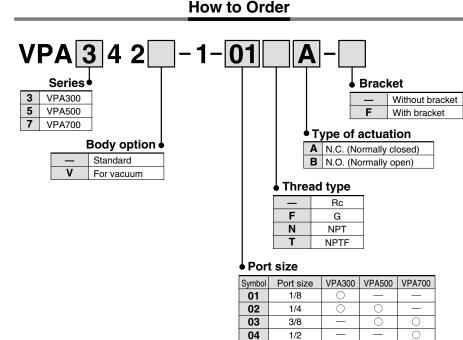

Specifications

Fluid		Air			
Type of actuation		N.C. or N.O. (Convertible)			
Operating pressure range (MPa)	Standard	0.2 to 1.0			
Operating pressure range (wra)	For vacuum	-100 kPa to 0.2			
Pilot pressure (MPa)		0.2 to 1.0 (Equivalent to the operating pressure or more)			
Ambient and fluid temperature (°C)		-10 to 50 (No freezing)			
Lubrication		Not required			
Mounting orientation		Unrestricted			
Impact/Vibration resistance (m/s²) Note)		300/50			

Note) Impact resistance: No malfunction occurred when tested in both the axial and right angle directions of main valve and armature (tested in both energized and de-energized states).

(Values at the initial period).

Vibration resistance: No malfunction occurred when tested in a one-sweep test between 45 and 2000

Hz, in both the axial and right angle directions of main valve and armature (tested

in both energized and de-energized states). (Values at the initial period).

Flow Characteristics/Mass

Model	Port size	$1 \leftrightarrow 2 (P \leftrightarrow A)$			$2 \leftrightarrow 3 (A \leftrightarrow R)$				Mana (a) Note 1)	
Model	FUIT SIZE	C [dm³/(s·bar)]	b	Cv	Q [d/min] (ANR)Note 2)	C [dm³/(s·bar)]	b	Cv	Q [e/min] (ANR)Note 2)	Mass (g) Note 1)
VPA342	1/8	3.5	0.26	0.8	868	3.6	0.26	0.9	893	118
VFA342	1/4	4.2	0.22	1.0	1018	4.2	0.23	1.0	1023	114
VPA542	1/4	7.9	0.21	1.8	1903	7.2	0.27	1.8	1797	237
VPA542	3/8	8.9	0.16	2.2	2085	8.9	0.20	2.1	2132	229
VPA742	3/8	11.9	0.21	2.7	2867	11.8	0.20	2.7	2826	501
VFA/42	1/2	15.1	0.21	3.6	3637	15.3	0.22	3.7	3707	484

Note 1) Values without brackets

Note 2) These valves have been calculated according to ISO6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.



Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions I for SMC Products" (M-E03-3) for Common Precautions.



Refer to back page 8 for changing the type of




Construction


Standard

JIS symbol

	N.C.	N.O.
Standard	12	12 13 (P)(R)
For vacuum	12	(A) 2 1 3 (P) (R)

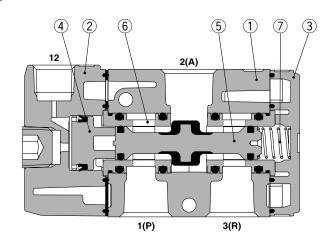

For vacuum

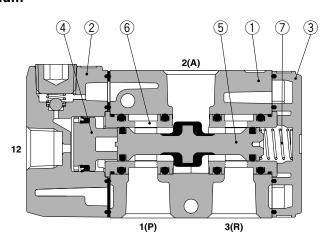

Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	White
2	Adapter plate	Aluminum die-casted	Grey
3	End plate	Resin	White
4	Piston	Resin	
5	Spool valve	Aluminum/HNBR	
6	Retainer	Resin	
7	Spring	Stainless steel	

Bracket Assembly Part No.


Description	Model	Part no.
	VPA342	VP300-227-1A
Bracket (With 2 screws)	VPA542	VP500-227-1A
(VVIIII Z 3016W3)	VPA742	VP700-227-1A




Series VPA300/500/700

Series VPA300/Body Ported/Dimensions

Standard/VPA342-1-01□A (-F)

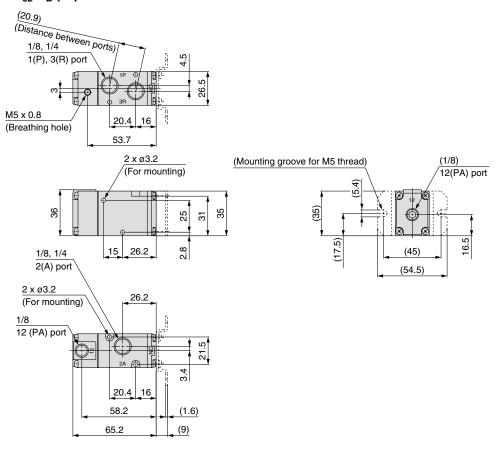


For vacuum/VPA342V-1- $^{01}_{02}\square^{A}_{B}$ (-F)

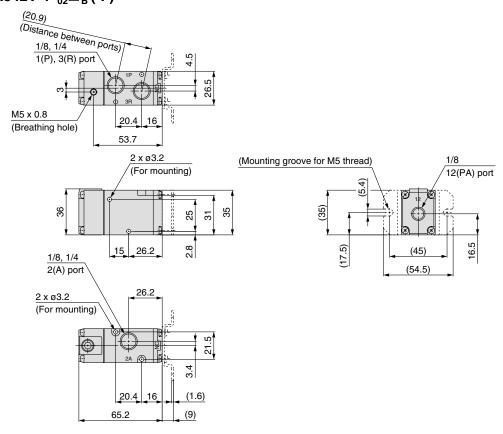


Series VPA500/Body Ported/Dimensions

Standard/VPA542-1-02 □ A (-F)

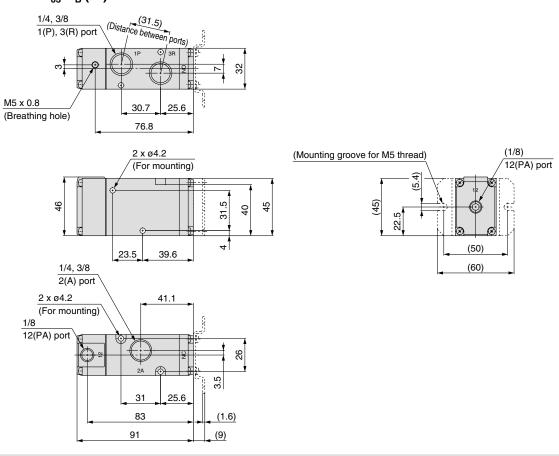


For vacuum/VPA542V-1-02 □ A (-F)

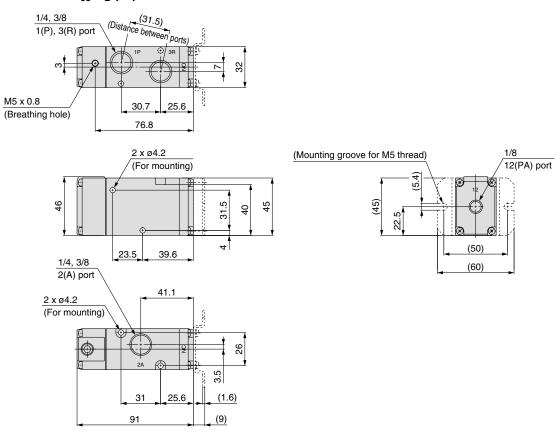


Series VPA300/500/700

Series VPA700/Body Ported/Dimensions

Standard/VPA742-1-03 □ A (-F)

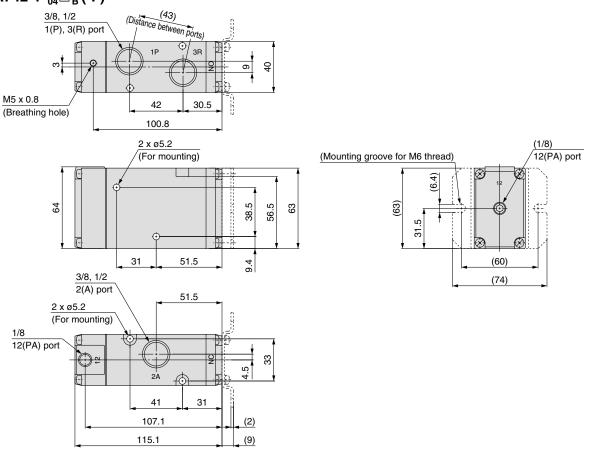



For vacuum/VPA742V-1-03 □ A (-F)

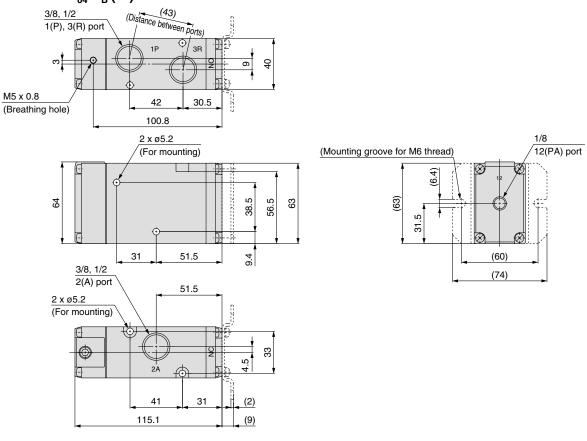

3 Port/Air Operated Valve **Base Mounted/Single Unit**

Series VPA300/500/700

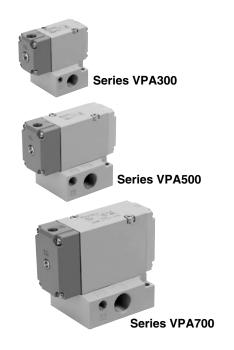

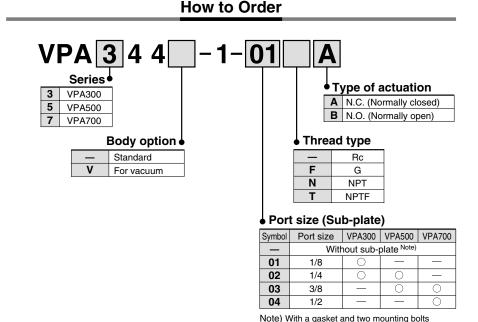

Specifications

Fluid		Air			
Type of actuation		N.C. or N.O. (Convertible)			
Operating pressure range (MPa)	Standard	0.2 to 1.0			
Operating pressure range (wra)	For vacuum	-100 kPa to 0.2			
Pilot pressure (MPa)		0.2 to 1.0 (Equivalent to the operating pressure or more)			
Ambient and fluid temperature (°C)		-10 to 50 (No freezing)			
Lubrication		Not required			
Mounting orientation		Unrestricted			
Impact/Vibration resistance (m/s²) Note)		300/50			

Note) Impact resistance:

No malfunction occurred when tested in both the axial and right angle directions of main valve and armature (tested in both energized and de-energized states).

(Values at the initial period).

Vibration resistance: No malfunction occurred when tested in a one-sweep test between 45 and 2000 Hz. in both the axial and right angle directions of main valve and armature (tested

Flow Characteristics/Mass

Model	Port size	$1 \leftrightarrow 2 (P \leftrightarrow A)$			$2 \leftrightarrow 3 (A \leftrightarrow R)$				Man () Note 1)	
iviodei	Port size	C [dm3/(s-bar)]	b	Cv	Q [d/min] (ANR)Note 2)	C [dm³/(s·bar)]	b	Cv	Q [d/min] (ANR)Note 2)	Mass (g) Note 1)
VPA344	1/8	3.6	0.22	0.8	872	3.5	0.24	0.8	858	185 (118)
VFA344	1/4	3.9	0.22	0.9	945	3.8	0.14	0.9	881	180 (118)
VPA544	1/4	7.5	0.16	1.7	1757	7.3	0.20	1.7	1749	358 (233)
VFA544	3/8	8.8	0.07	2.0	1968	8.8	0.13	2.0	2029	350 (233)
VPA744	3/8	12.9	0.10	2.9	2929	13.3	0.24	3.1	3260	693 (476)
VFA/44	1/2	14.7	0.05	3.3	3256	15.0	0.17	3.4	3534	675 (476)

Note 1) () valves: Values without sub-plate

Note 2) These valves have been calculated according to ISO6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.



I Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions I for SMC Products" (M-E03-3) for Common Precautions.



Refer to back page 8 for changing the type of actuation.




Series VPA300/500/700

Construction


JIS symbol

	N.C.	N.O.							
Standard	12	12 (A) 2 (A) 1 3 (P)(R)							
For vacuum	12 13 (P) (R)	12 13 (P) (R)							

Standard

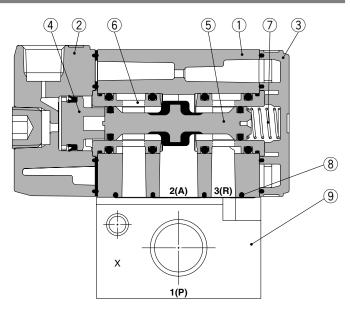

For vacuum

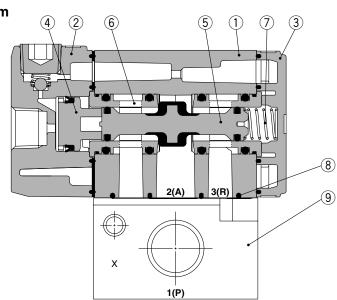

Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	White
2	Adapter plate	Aluminum die-casted	Grey
3	End plate	Resin	White
4	Piston	Resin	
5	Spool valve	Aluminum/HNBR	
6	Retainer	Resin	
7	Spring	Stainless steel	

Replacement Parts


No. Description			Note		
INO.	Description	VP344	VP544	VP744	Note
8	Gasket	VP300-217-1	VP500-217-1	VP700-217-1	HNBR
9	Sub-plate	VP300-202-□	VP500-202-□	VP700-202-□	Aluminum die-casted
_	Hexagon socket head bolt (1 pc.)	VP300-224-1 (M3 x 36)	VP500-224-1 (M4 x 46)	VP700-224-1 (M5 x 66)	For valve mounting

⚠ Caution

Tightening Torque of Mounting Screw

M3: 0.8 N·m M4: 1.4 N·m M5: 2.9 N·m

How to Order Sub-plate

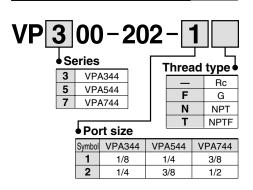





Air Operated Valve Base Mounted/Single Unit Series VPA300/500/700

Series VPA300/Base Mounted/Dimensions

Standard/VPA344-1- $^{01}_{02}\Box^{A}_{B}$

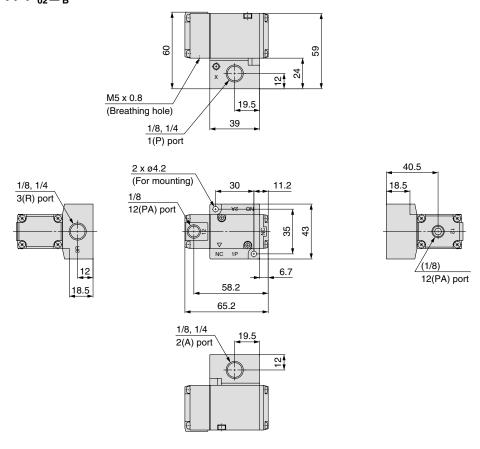


For vacuum/VPA344V-1- $^{01}_{02}\Box^{A}_{B}$

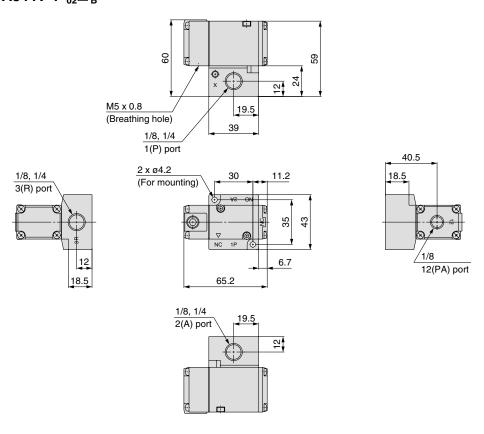

Series VPA300/500/700

Series VPA500/Base Mounted/Dimensions

Standard/VPA544-1-02 □B

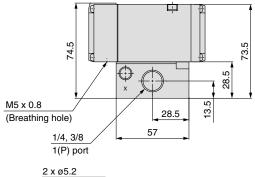



4 2

12.6


28.5


2(A) port

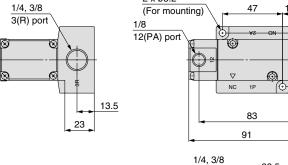








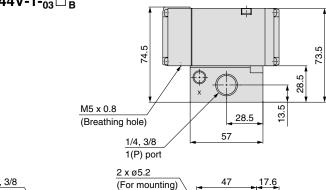

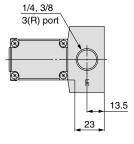

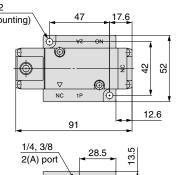


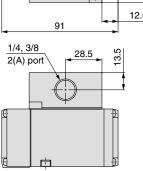




Air Operated Valve Base Mounted/Single Unit Series VPA300/500/700


Series VPA700/Base Mounted/Dimensions

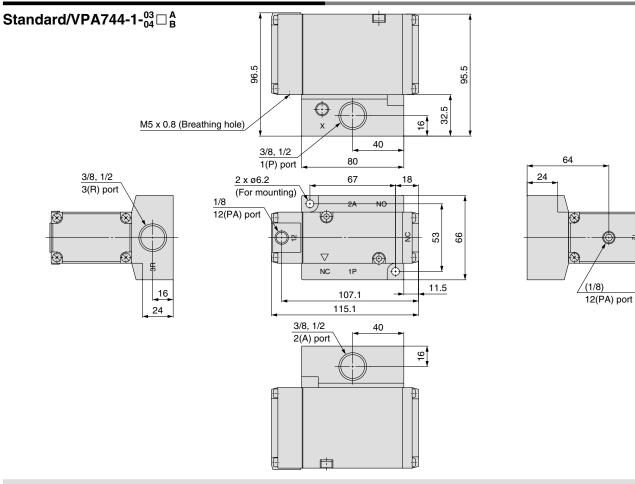


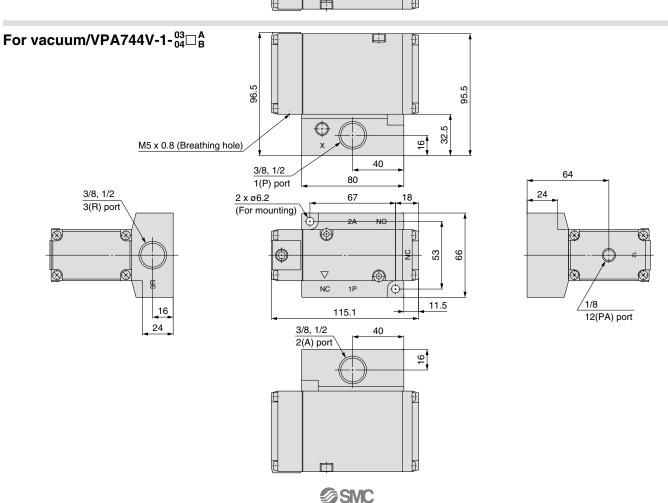

3 Port/Air Operated Valve Manifold Common Exhaust Type 41 / Individual Exhaust Type 42 Series VPA300/500/700

How to Order Manifold

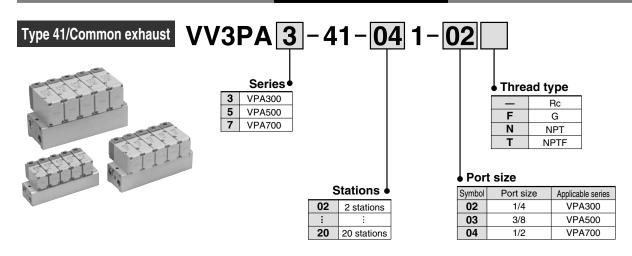

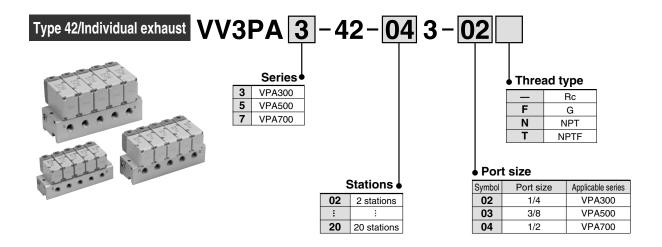


Manifold Option

Description	Part no.	Applicable manifold base model		
Planking plate accombly	VP300-25-1A	VV3PA3		
Blanking plate assembly (With a gasket and two mounting bolts)	VP500-25-1A	VV3PA5		
	VP700-25-1A	VV3PA7		





How to Order Valve (With a gasket and two mounting bolts)

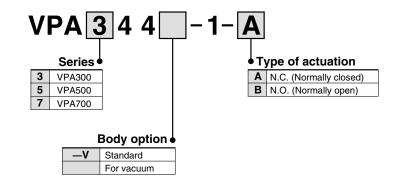


Manifold Specifications

	Base model	Piping specifications					Manifold base
Series		1P (SUP) port type	3R (EXH) port type	Port size	Applicable valve	Applicable stations Note	Mass: W [g] Stations: n
VPA300	VV3PA3-41	Common	Common	1/4	VPA344	2 to 20 stations	W = 110n + 90
VPASUU	VV3PA3-42		Individual				
VPA500	VV3PA5-41		Common	0/0	VPA544	2 to 20 stations	W = 190n + 150
VPASOU	VV3PA5-42		Individual	3/8			
VPA700	VV3PA7-41		Common	1/2	VPA744	2 to 20 stations	W = 410n + 380
	VV3PA7-42		Individual				






How to Order Manifold Assembly (Example)

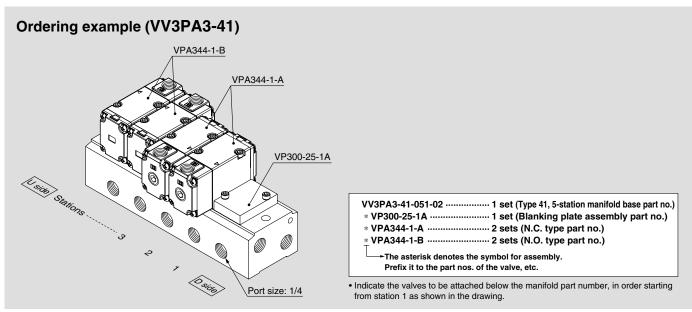

Series VPA300/500/700


Series VPA300/Dimensions

Type 41/Common exhaust: VV3PA3-41-Stations 1-02

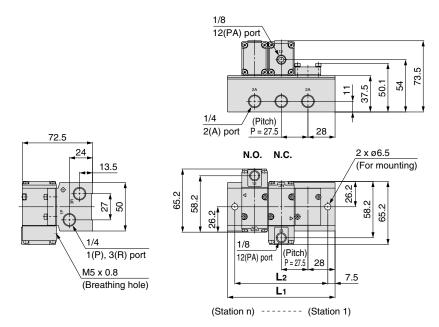

Station n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L ₁	83.5	111	138.5	166	193.5	221	248.5	276	303.5	331	358.5	386	413.5	441	468.5	496	523.5	551	578.5
L ₂	68.5	96	123.5	151	178.5	206	233.5	261	288.5	316	343.5	371	398.5	426	453.5	481	508.5	536	563.5

Type 42/Individual exhaust: VV3PA3-42-Stations 3-02

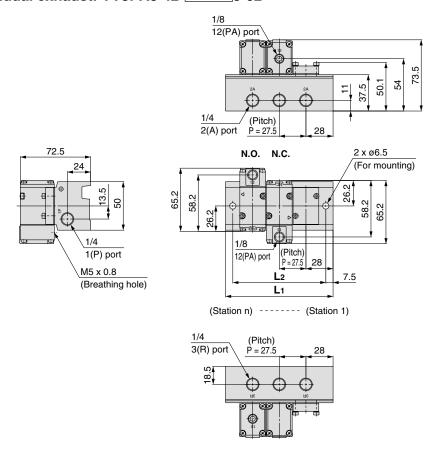


Station n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L ₁	83.5	111	138.5	166	193.5	221	248.5	276	303.5	331	358.5	386	413.5	441	468.5	496	523.5	551	578.5
L2	68.5	96	123.5	151	178.5	206	233.5	261	288.5	316	343.5	371	398.5	426	453.5	481	508.5	536	563.5

Air Operated Valve Common Exhaust Type 41 /Individual Exhaust Type 42 Series VPA300/500/700


Series VPA500/Dimensions

Type 41/Common exhaust: VV3PA5-41-Stations 1-03

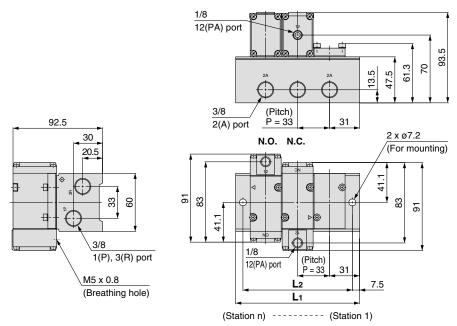

Station n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L ₁	95	128	161	194	227	260	293	326	359	392	425	458	491	524	557	590	623	656	689
L2	80	113	146	179	212	245	278	311	344	377	410	443	476	509	542	575	608	641	674

Type 42/Individual exhaust: VV3PA5-42-Stations 3-03

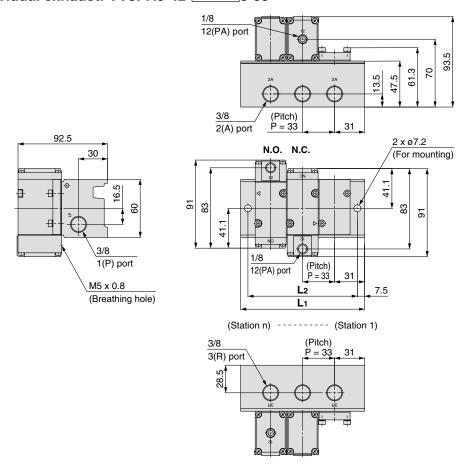


Station n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L ₁	95	128	161	194	227	260	293	326	359	392	425	458	491	524	557	590	623	656	689
L2	80	113	146	179	212	245	278	311	344	377	410	443	476	509	542	575	608	641	674

Series VPA300/500/700


Series VPA700/Dimensions

Type 41/Common exhaust: VV3PA7-41-Stations 1-04

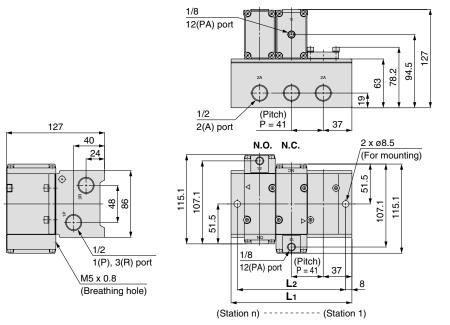

Station n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L ₁	115	156	197	238	279	320	361	402	443	484	525	566	607	648	689	730	771	812	853
L2	99	140	181	222	263	304	345	386	427	468	509	550	591	632	673	714	755	796	837

Type 42/Individual exhaust: VV3PA7-42-Stations 3-04

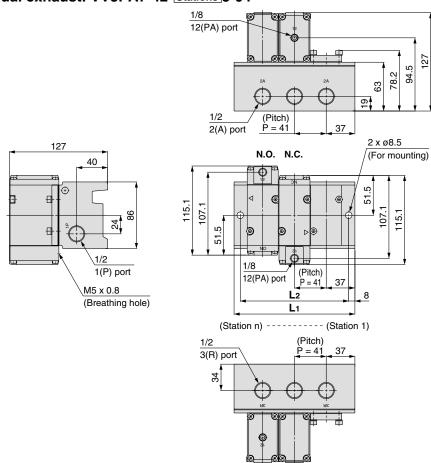

Station n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L ₁	115	156	197	238	279	320	361	402	443	484	525	566	607	648	689	730	771	812	853
L2	99	140	181	222	263	304	345	386	427	468	509	550	591	632	673	714	755	796	837





These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) Note 1) and other safety regulations.

Note 1) ISO 4414: Pneumatic fluid power – General rules relating to systems.

ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218: Manipulating industrial robots -Safety.

etc.

⚠ Caution: Operator error could result in injury or equipment damage.

Warning: Operator error could result in serious injury or loss of life.

⚠ Danger: In extreme conditions, there is a possibility of serious injury or loss of life.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
 - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.





ACaution

The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited Warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited Warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product.

Limited Warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered. Note 2)
 - Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.
 - This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
 - Note 2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

When the product is exported, strictly follow the laws required by the Ministry of Economy, Trade and Industry (Foreign Exchange and Foreign Trade Control Law).



Be sure to read before handling.


Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

Manual Override

△ Warning


When no electric signal is applied to the solenoid valve. The manual override is used for switching the main valve. Connected actuator is started by manual operation. Use the manual override after confirming that there is no danger.


■ Non-locking push type

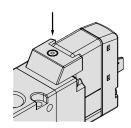

Push down on the manual override button with a small screwdriver until it stops. Release the screwdriver and the manual override will return.


■ Push-turn locking slotted type

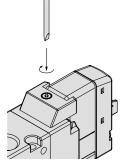




Push the manual override button with a small flat head screwdriver until it stops. Turn it in the clockwise direction 90° to lock the manual. Turn it counterclockwise to release it.

■ Push-turn locking lever type

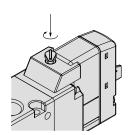



After pushing down, turn in the direction of the arrow. If it is not turned, it can be operated the same way as the non-locking type.

⚠ Caution

When locking the manual override with the push-turn locking type (D or E type), be sure to push it down before turning.

Turning without first pushing it down can cause damage to the manual override and other troubles such as air leakage, etc.


Do not apply excessive torque when turning the locking type manual override. (0.1 N·m)

How to Use L/M-Type Plug Connector

∧ Caution


1. Attaching and detaching connectors

- To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.
- To detach a connector, remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out.

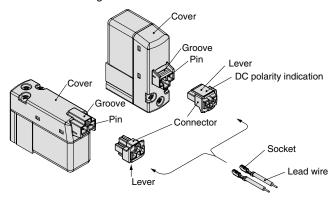

2. Crimping lead wires and sockets

Strip 3.2 to 3.7 mm at the end of the lead wires, insert the ends of the core wires evenly into the sockets, and then crimp with a crimping tool. When this is done, take care that the coverings of the lead wires do not enter the core wire crimping area. (Please contact SMC for details on the crimping tool.)



Note) It is not necessary to crimp lead wires and socket if ordering the lead wire pre-connected model.


3. Attaching and detaching sockets with lead wire

Attachine

Insert the sockets into the square holes of the connector (\oplus, \ominus) indication), and continue to push the sockets all the way in until they lock by hooking into the seats in the connector. (When they are pushed in, their hooks open and they are locked automatically.) Then, confirm that they are locked by pulling lightly on the lead wires.

Detaching

To detach a socket from a connector, pull out the lead wire while pressing the socket's hook with a stick having a thin tip (approx. 1 mm). If the socket will be used again, first spread the hook outward.





Be sure to read before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

Plug Connector Lead Wire Length

⚠ Caution

Plug connector lead wires have a standard length of 300 mm, however, the following lengths are also available.

How	to Order Connecto	r Assem	bly	
DC	: V200-30-4A-			
100 VAC	: V200-30-1A-			
200 VAC	: V200-30-2A-	\Box		
AC other volta	ges: V200-30-3A-			
Without lead w (With connector and	vire: V200-30-A			
		Lead	wire length	
		Nil	300 mm	
		_		

Nil	300 mm
6	600 mm
10	1000 mm
15	1500 mm
20	2000 mm
25	2500 mm
30	3000 mm
50	5000 mm

How to Order

Include the connector assembly part number together with the part number for the plug connector's solenoid valve without connector.

(Example) 2000 mm lead wire length:

DC	AC
VP342-5LO1-01A	VP342-1LO1-01A
V200-30-4A-20	V200-30-1A-20

How to Use DIN Terminal

The DIN terminal type with an IP65 enclosure is protected against dust and water, however, it must not be used in water.

⚠ Caution

Connection

- 1) Loosen the set screw and pull the connector out of the solenoid valve terminal block.
- After removing the set screw, insert a flat head screwdriver into the notch on the bottom of the terminal block and pry it open, separating the terminal block and the housing.
- Loosen the terminal screws on the terminal block, insert the core of the lead wire into the terminal, and attach securely with the terminal screws.
 - In addition, when using the DC mode type with a surge voltage suppressor (polar: S and Z types), connect wires corresponding to the polarity (+ or -) that is printed on the terminal block.
- 4) Tighten the ground nut to secure the wire. In the case of connecting wires, select cabtire cords carefully because if those out of the specified range (ø4.5 to ø7) are used, it will not be able to satisfy IP65 (enclosure). Tighten the ground nut and set screw within the specified range of torque.

Changing the entry direction

After separating terminal block and housing, the cord entry direction can be changed by attaching the housing in the opposite direction.

Note) Make sure not to damage elements, etc., with the lead wires of the cord.

Precautions

Plug in and pull out the connector vertically without tilting to one side.


Applicable cable

Cable O.D.: ø4.5 to ø7.

(Reference) 0.5 mm² to 1.5 mm², 2-core or 3-core, equivalent to JIS C 3306.

Applicable crimped terminal

O terminal: R1.25-4M that is specified in JIS C 2805. Y terminal: 1.25-3L, which is released by JST Mfg. Co., Ltd. Stick terminal: size 1.5 or shorter.

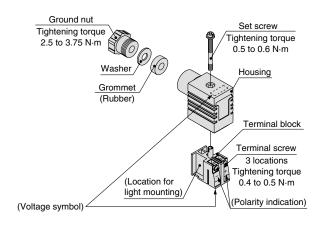





Be sure to read before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

DIN (EN175301-803) Terminal

Y type DIN terminal corresponds to the DIN connector with terminal pitch 10 mm, which complies with EN175301-803B. Since the terminal pitch is different from the D type DIN connector, these two types are not interchangeable.






01 | 100/110 VAC [115 VAC]

02 200/220 VAC [230 VAC]

240 VAC


How to Order DIN Connector

∕ Caution

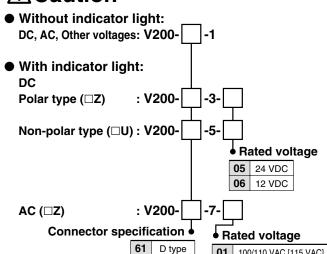

Circuit with indicator light (Built-in connector)

63 Y type



LED: Light emitting diode, R: Resistor NL: Neon bulb, R: Resistor

DC (□Z) circuit **▶**″_₩ R LED: Light emitting diode

D: Protective diode

R: Resistor

Back page 5

How to Use Conduit Terminal


⚠ Caution

Connection

- 1) Loosen the set screw and remove the terminal block cover from the terminal block.
- 2) Loosen the terminal screws on the terminal block, insert the core of the lead wire or crimped terminal into the terminal, and attach securely with the terminal screws.
 - In addition, when using the DC mode type with a surge voltage suppressor (polar: S and Z types), connect wires to terminal 1 and 2 corresponding to the polarity (+ or -) as shown on the figure on the right.
- 3) Secure the cord by fastening the ground nut.

In case of connecting wires, select cabtire cords carefully because if those out of the specified range (ø4.5 to ø7) are used, it will not be able to satisfy IP65 (enclosure).

Tighten the ground nut and set screw within the specified range of torque.

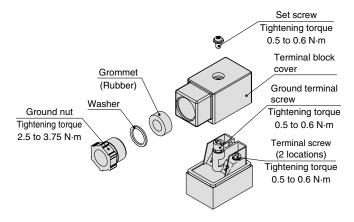

Applicable cable

Cable O.D.: ø4.5 to ø7.

(Reference) 0.5 mm² to 1.5 mm², 2-core or 3-core, equivalent to JIS C 3306.

Applicable crimped terminal

O terminal: Equivalent to R1.25-3 that is specified in JIS C 2805. Y terminal: Equivalent to 1.25-3, which is released by JST Mfg. Co., Ltd.

Note) Use O terminal when a ground terminal is used.






Be sure to read before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

Leakage Voltage

⚠ Caution

Especially when a resistor and a switching element are used in parallel or C-R device (surge voltage suppressor) is used for the protection of the switching device, note that leakage voltage will be increased by passing leakage voltage through the resistor and C-R device. Therefore, suppressor residual leakage voltage should be as follows.



DC coil

3% or less of the rated voltage

AC coil

8% or less of the rated voltage

Continuous Duty

⚠ Caution


- If a valve is continuously energized for long periods of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. If the valve is continuously energized for a long time, or the total energizing time per day becomes longer than the non-energizing time, use a valve with power saving circuit.
 Also, it is possible to reduce the energizing time by using a
 - N.O. (normally open) valve.
- When the valve is mounted onto a control panel, take measures against radiation in order to keep the valve temperature within the specified range.

Light/Surge Voltage Suppressor


⚠ Caution

<DC>

■ Polar type




Grommet or L/M-type plug connector
 With light/surge voltage suppressor (□Z)




DIN or Conduit terminal

■ Non-polar type

With surge voltage suppressor (□R)



● Grommet or L/M-type plug connector
 With light/surge voltage suppressor (□U)



DIN or Conduit terminal

With light/surge voltage suppressor (□U)

(-) (+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (-) ○

(+) (

- Please connect correctly the lead wires to + (positive) and (negative) indications on the connector. (For non-polar type, the lead wires can be connected to either one.)
- When the valve with mis-wiring protection diode is used, the voltage will drop by approx. 1 V. Therefore, pay attention to the allowable voltage fluctuation (For details, refer to the solenoid specification of each type of valve).
- Solenoids, whose lead wires have been pre-wired: + (positive) side red and – (negative) side black.





Be sure to read before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.


Light/Surge Voltage Suppressor

■ With power saving circuit


Power consumption is decreased by approx. 1/3 by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 40 ms at 24 VDC.)

Refer to the electrical power waveform as shown below.

<Electrical power waveform of energy saving type>

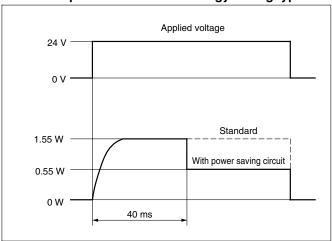


• Since the voltage will drop by approx. 0.5 V due to the transistor, pay attention to the allowable voltage fluctuation. (For details, refer to the solenoid specifications of each type of valve.)




<AC>

There is no S option, since a rectifier prevents surge voltage generation.

● Grommet or L/M-type plug connector
 With light/surge voltage suppressor (□Z)



◆ DIN or Conduit terminal
 With light/surge voltage suppressor (□Z)



∧ Caution

Residual voltage of the surge voltage suppressor

Note) if a varistor or diode surge voltage suppressor is used, there is some residual voltage to the protection element and rated voltage. Therefore, refer to the table below and pay attention to the surge voltage protection on the controller side. Also, since the response time does change, refer to the specifications on page 2 and 9.

Residual Voltage

Curre veltere currence	D	С	4.0
Surge voltage suppressor	24	12	AC
S, Z	Appro	x. 1 V	Approx. 1 V
R, U	Approx. 47 V	Approx. 32 V	_

Countermeasure for Surge Voltage Intrusion

⚠ Caution

With non-polar type solenoid valves, at times of sudden interruption of the loading power supply, such as emergency shutdown, surge voltage intrusion may be generated from loading equipment with a large capacity (power consumption), and the solenoid valve in a deenergized state may switch over (see Figure 1).

When installing a breaker circuit for the loading power supply, consider using a solenoid valve with polarity (with polarity protection diode), or install a surge absorption diode between the loading equipment COM line and the output equipment COM line (see Figure 2).

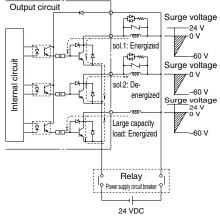


Figure 1. Surge intrusion circuit example (NPN outlet example) (24 VDC)

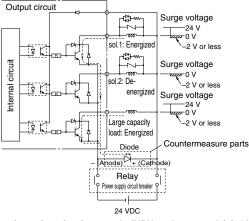


Figure 2. Surge intrusion circuit example (NPN outlet example) (24 VDC)





Be sure to read before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.


Type of Actuation Changing

△ Warning

When changing the actuation or restarting the valve after the change, make sure that safety is fully assured.

Example: Changing from N.C. to N.O.


1) Base mounted



- Remove the body from the sub-plate and reset the "▼" mark on the body corresponding to the "N.O." mark on the sub-plate as shown in the figure above.
- Remove the end plate from the body and rotate the end plate by 180° so that the "N.O." mark on the end plate is at the top of the valve.

Note) It is not necessary to change the piping when this is done.

2) Body ported



 Remove the end plate from the body and rotate the end plate by 180° to correspond the "N.O." mark on the end plate to the top of the valve.

Note) Piping should be arranged as follows.

Type Port of actuation	1P	2A	3R
N.C.	Inlet side	Outlet side	Exhaust side
N.O.	Exhaust side	Outlet side	Inlet side

One-touch Fittings

⚠ Caution

When fittings are used, they may interfere with others depending on their types and sizes. Therefore, the dimensions of the fittings to be used should first be confirmed in their respective catalogues.

Fittings compliant with the VP series are stated below. If the fitting within the applicable range is selected, there will not be any interference.

Applicable Fittings: Series KQ2H, KQ2S

	i ittiings. o		,						
Carina	Piping	Port		A	oplicat	le tub	ing O.I	D.	
Series	port	size	ø3.2	ø4	ø6	ø8	ø10	ø12	ø16
VP(A)300	1P, 2A, 3R	1/8, 1/4							
VP(A)300	Х	M5							
VP(A)500	1P, 2A, 3R	1/4, 3/8							
VF(A)500	Х	1/8							
VP(A)700	1P, 2A, 3R	3/8, 1/2							
VP(A)/00	Х	1/8							
VV3P(A)3	1P, 2A, 3R	1/4							
Manifold base	Х	M5							
VV3P(A)5	1P, 2A, 3R	3/8							
Manifold base	Х	M5							
VV3P(A)7	1P, 2A, 3R	1/2							
Manifold base	Х	1/8							

3/2 пневмораспределитель с электропневматическим управлением для больших расходов **VP3000**

G1/2 ~ G2

- Высокая пропускная способность
- Возможно применение для вакуума (до -101.2 кПа) или при низком давлении (0 \sim 0.2 МПа)

Технические характеристики

Среда		Очищенный сжатый воздух с содержанием масла.				
Тип управления		Внутреннее пилотное управление	Внешнее пилотное управление			
Рабочий диапазон (МПа)		0.2 ~ 0.8	Давление на входе	-0.1 ~ 0.8		
			Давление пилот-	0.2 ~ 0.3		
			ного воздуха			
Диапазон рабочих	температур (°C)	Макс. 60				
Время срабатывани	ия (мс)	< 40				
Макс. частота сраб	атывания (Гц)	3				
Смазка		Требуется (ISO VG32, класс 1)				
Вспомогательное р	учное управление	Не блокируется				
Монтажное положе	ние	Произвольное				
Электрический под	вод	DIN разъем				
Напряжение* (В)	DC	24				
	AC	220				
Допуск по напряже	нию	-15% до +10%				
Потребляемая	DC (B _T)	12				
мощность	AC (BA)	73 при переключении				
		28 при удержании				
Степень защиты		IP65				
Класс изоляции		В				
Искрогашение		По запросу				
Индикатор рабочег	о состояния	По запросу				



Номер для заказа

Номер для заказа		Тип	Условное обозначение	Присоед. резьба	Номинальный расход воздуха	Вес (г)
24 V DC	220 V AC				(норм. л/мин)	
VP3145-045DA-F	VP3145-044DA-F	3/2 H.3./H.O. *	A	G1/2	5496	1.5
VP3145-065DA-F	VP3145-064DA-F			G3/4	5987	1.5
VP3165-065DA-F	VP3165-064DA-F		R P	G3/4	12563	2
VP3165-105DA-F	VP3165-104DA-F			G1	15311	2
VP3165-125DA-F	VP3165-124DA-F			G1 1/4	16882	2
VP3185-125DA-F	VP3185-124DA-F			G1 1/4	31113	2.8
VP3185-145DA-F	VP3185-144DA-F			G1 1/2	35432	2.8
VP3185-205DA-F	VP3185-204DA-F			G2	35432	2.8

^{*}О переключении с Н.З. на Н.О см. далее

Исполнения с внешним пилотным управлением и для вакуума/низкого давления поставляются по запросу

Запасные части

Наименование	Напряжение	Номер для заказа
Запасной элемент включения	24 V DC	VT3113-005D
с катушкой электромагнита	220 V AC	VT3113-004D

^{*} Другие напряжения по запросу



Переключение с Н.З. на Н.О.

Для переключения с Н.З. на Н.О. в составе распределителя имеется специальная коммутирующая пластина, положение которой определяет тип распределителя. Для переключения необходимо, отсоединив пилотный клапан, повернуть коммутирующую пластину вместе с верхним и нижним уплотнениями так, чтобы соответственное буквенное обозначение на пластине совпало с меткой на корпусе распределителя см. рис.1. Подключение портов см. табл. 1.


H.O. распределитель будет функционировать правильно, если κ нему подано достаточное давление.

Убедитесь, что распределитель во время переключения не находится под давлением.

Подключение


Табл. 1


Тип	Условное	Подключение		
	обозначение	Порт Р	Порт А	Порт R
Нормально	(OUT)	Подвод	К потребителю	Выхлоп
закрытый	M. Jan	сжатого		
	1 3 (IN) (EXH)	воздуха		
Нормально	(OUT)	Подвод	К потребителю	Выхлоп
открытый		сжатого		
	1 3 (IN) (EXH)	воздуха		

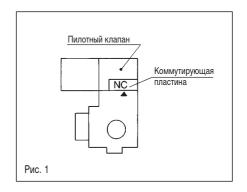



Размеры

VP3145

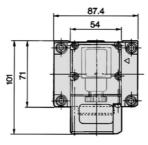

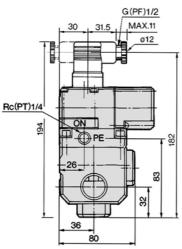

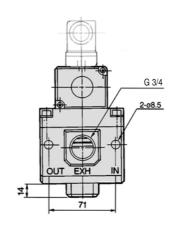

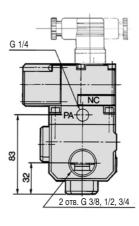


3/2 пневмораспределитель с электропневматическим управлением для больших расходов


VP3000

Размеры

VP3165

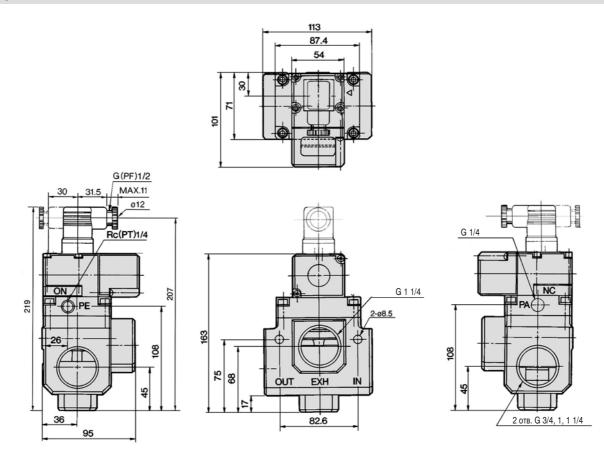

VP3185

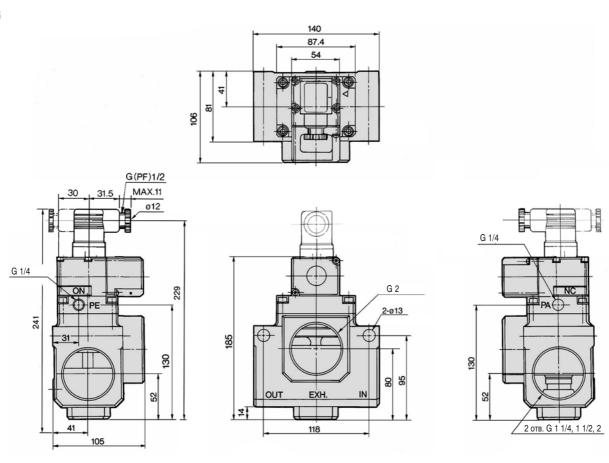


Made to Order: Series VP3145/3165/3185 Main Valve Double Acting Type: -X80/X81






Note) CE-compliant: D/DO only (Electrical entry)

How to Order

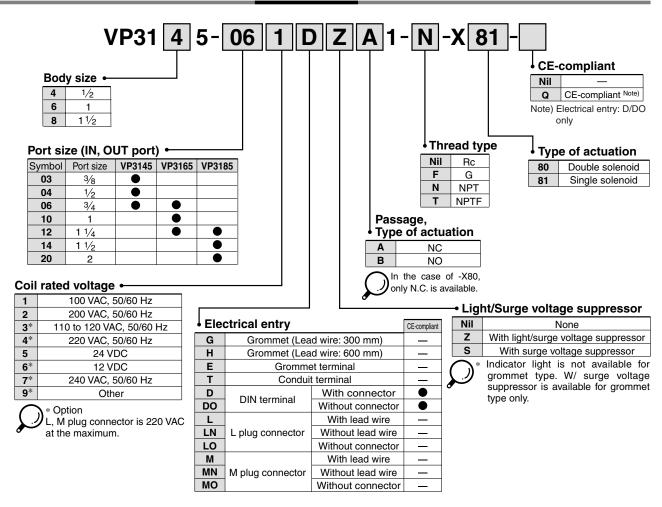


How to Order Pilot Valve Assembl

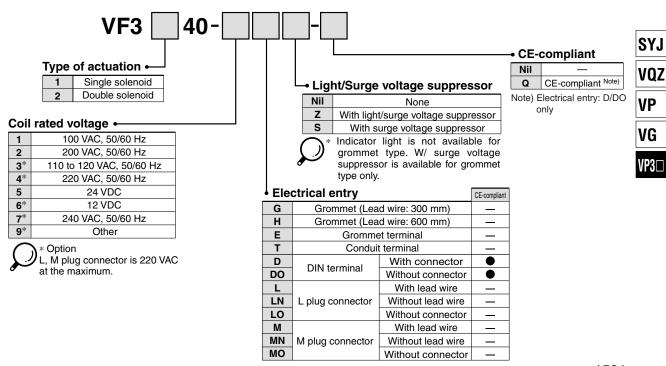


Series VP3145/3165/3185

JIS Symbol -X80



-X81



Specifications


Valve configuration	External pilot 3 port solenoid valve		
Type of actuation	Double solenoid (-X80), Single solenoid (-X81)		
Fluid	Air		
Operating pressure range	-101.2 kPa to 0.8 MPa		
Pilot pressure	85 to 115% of main pressure, Min. 0.2 MPa		
Ambient and fluid temperature	0 to 50°C (No freezing)		
Lubrication (1)	Required (Equivalent to turbine oil Class 1 ISO VG32)		
Mounting orientation	Unrestricted		
Impact/Vibration resistance (2)	150/50 m/s ²		

Note 1) This solenoid valve requires lubrication. Use turbine oil Class 1 (ISO VG32). Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 1000 Hz. Test was performed at both energized and deenergized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Solenoid Specifications


Electrical entry	Grommet, Grommet terminal, Conduit terminal DIN terminal, L plug connector, M plug connector			
Coil rated voltage (V)	AC (50/60 Hz)	100, 200, 110*, 220*, 240*		
Con rated voltage (v)	DC	24, 12*		
Allowable voltage fluctuation	–15 to 10%			
Apparent power (AC) Note)	Inrush	5.6 VA/50 Hz, 5.0 VA/60 Hz		
Apparent power (AC)	Holding	3.4 VA/50 Hz, 2.3 VA/60 Hz		
Power consumption (DC) Note)	W/o indicator light	1.8W		
Power consumption (DC)	W/ indicator light	2W		



∆ Caution

Piping and other usage are the same as standard products.

Dimensions

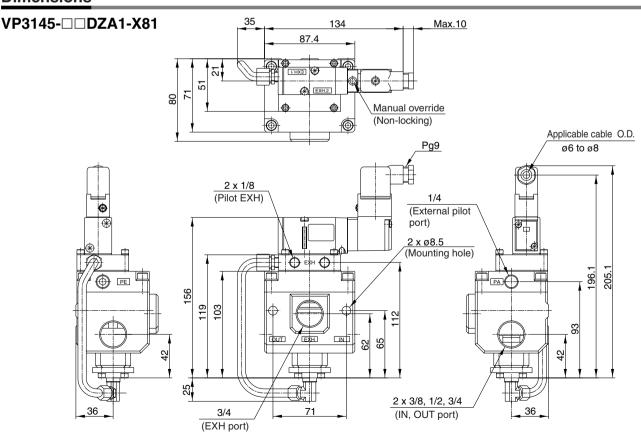

• When B spec. of -X81 (N.O. spec.), VF3140 solenoid has to be positioned at left, when looking at the EXH port in the front face. In the case of -X80, VF3240-□□□ (Pilot valve) will be mounted.




Large Size 3 Port Solenoid Valve Series VP3145/3165/3185

Dimensions

VP3165-□□**DZA1-X81** 146.5 Max.10 113 87.4 • Manual override (Non-locking) Applicable cable O.D. Pg9 ø6 to ø8 1/4 2 x 1/8 (External pilot Pilot EXH port) 2 x ø8.5 (Mounting hole) **⊕** EM+⊕ **(** ┦⊠⊕ 221 137 144 28 78 85 55 22 22 $1^{1/4}$ (EXH port) 36 82.6 _36 2 x ³/4, 1, 1¹/4 (IN, OUT port)

• When B spec. of -X81 (N.O. spec.), VF3140 solenoid has to be positioned at left, when looking at the EXH port in the front face.
• In the case of -X80, VF3240-□□□ (Pilot valve) will be mounted.

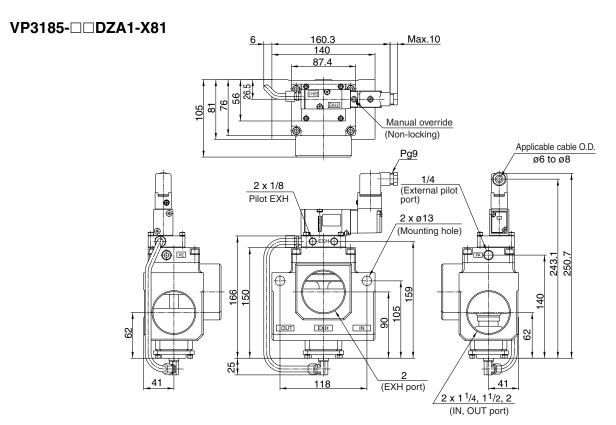

• When B spec. of -X81 (N.O. spec.), VF3140 solenoid has to be positioned at left, when looking at the EXH port in the front face.
• In the case of -X80, VF3240-□□□ (Pilot valve) will be mounted.

SYJ

VQZ

VP

VG

VP3□



Series VP3145/3165/3185 Specific Product Precautions

Be sure to read before handling.

Refer to front matters 58 and 59 for Safety Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

△ Caution

Piping

If supply port air pressure drops to less than 0.2 MPa, the valve may malfunction. In such a case, use external pilot type. (When throttling IN port, or operating with OUT port open to the atmosphere or in a similar operation.)

Pressure balance among each port

This solenoid valve is pressure-unbalanced type. Operate it within this pressure range: $IN \ge OUT \ge EXH$. If not operated in the range, the valve will malfunction.

Use as 2 port valve

- Plug EXH port in case of pressure-in and plug IN port in case of vacuum use.
- This valve has slight air leakage and can not be used for such purposes as holding air pressure (including vacuum) in the pressure container.

Supply air

Install an air filter and a lubricator on the upstream side.

Lubrication

This solenoid valve requires lubrication. Use turbine oil Class 1 (ISO VG32). Besides that, for brands of each manufacturer, refer to page 6.

Environment

If using the valve in a dusty environment, install a silencer at EXH port and PE port to prevent dust from entering.

N.C./N.O. conversion

When changing the direction of a switching plate to convert from N.C. to N.O. and vice versa, note that the equipment to be connected will act reversely.

How to Calculate the Flow Rate

For obtaining the flow rate, refer to front matters 44 to 47.

Light/Surge Voltage Suppressor

	Grommet (G)	Conduit terminal (T)	DIN terminal (D)
With indicator light (L)	None	Neon bulb	48 VDC or less 100 VAC or more Neon bulb
Surge voltage suppressor (S)		⊚ Varistor ⊚	Z 2 5 5
With light/surge voltage suppressor (Z)	None	Neon bulb Varistor Z	Varistor Z

 \bigcirc

"Items that are marked "With indicator light," "With surge voltage suppressors," and "With light/surge voltage suppressor" are all non-polar types.

How to Use DIN Terminal

1. Disassembly


- After loosening the screw (1), then if the housing (4) is pulled in the direction of the screw, the connector will be removed from the body of equipment (solenoid, etc.).
- 2) Pull out the screw (1), then remove the gasket (2a) or (2b).
- 3) On the bottom part of the terminal block (3), there's a cut-off part (indication of an arrow) (3a). If a small flat head screwdriver is inserted between the opening in the bottom, terminal block (3) will be removed from the cover (4). (Refer to the figure below.)
- 4) Remove the cable gland (5) and plain washer (6) and rubber seal (7).

2. Wiring

- 1) Pass them through the cable (8) in the order of cable ground (5), washer (6), rubber seal (7), and then insert into the housing (4).
- 2) Dimensions of the cable (8) are the figure as below. Skin the cable and crimp the crimped terminal (9) to the edges.
- 3) Remove the screw with washer (3e) from the bracket (3e). (Loosen in the case of Yshape type terminal.) As shown in the below figure, mount a crimped terminal (9), and then again tighten the screw (3e).
- Note) Tighten within the tightening torque of 0.5 N·m±15%.
- Note: a It is possible to wire even in the state of bare wire. In that case, loosen the screw with washer (3e) and place a lead wire (3d) into the bracket, and then tighten it once again.
 - b Maximum size of crimped terminal (9) is up to 1.25 mm² —3.5 when O terminal. For Y terminal, it is up to 1.25 mm²—4.
 - c Cable (8) external: 6 to 12 mm ø
- Note) For the one with the external dimension ranged between 9 to 12 mmø, remove the inside parts of the rubber seal (7) before using.

3. Assembly

- Terminal block (3) connected with housing (4) should be reinstated. (Push it down until you hear the click sound.)
- Putting rubber seal (7), plain washer (6), in this order into the cable introducing slit on the housing (4), then further tighten the cable gland (5) securely.
- 3) By inserting gasket (2a) or (2b) between the bottom part of the terminal block (3) and a plug on an equipment, screw in (1) on top of the housing (4) and tighten it.
- Note) Tighten within the tightening torque of 0.5 N·m ±20%.
- Note: The orientation of a connector can be changed arbitrarily, depending on the combination of a housing (4) and a terminal block (3).

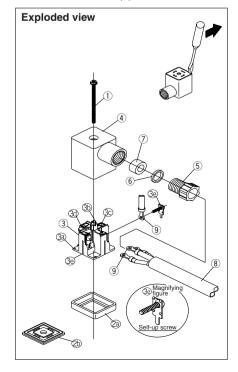




Modular Connection Type

Residual Pressure Relief 3 Port Solenoid Valve




For connecting to F.R.L. units

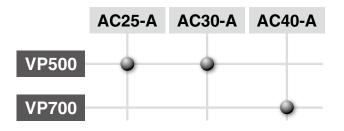

Allows for space saving and reduced piping labor.

Power consumption: 0.35 W (Without light)



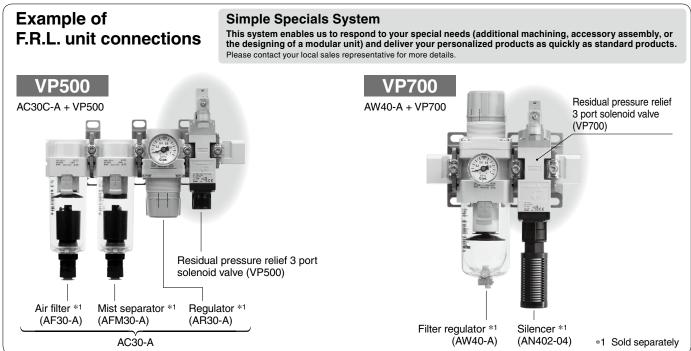






How to Order



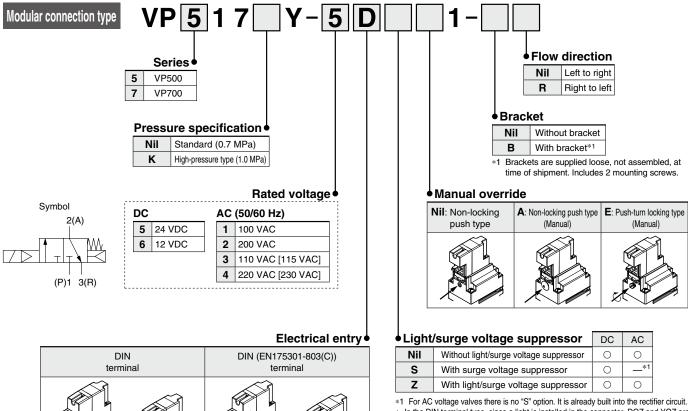

 Refer to the Web Catalog (VP300/500 Low wattage specification) for details of the DIN terminal.


Y: With connector YO: Without connector

⚠ Caution

When using the surge voltage suppressor type, residual voltage will remain. For details, refer to the **Web Catalog** (VP300/500 Low wattage specification).

Assembly Example

D: With connector DO: Without connector

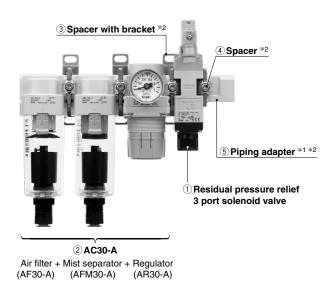

- *1 Connection threads are not available for the residual pressure relief 3 port solenoid valve. Order a piping adapter separately.
- *2 Refer to page 3 for details of the spacer and piping adapter.

Products do not come assembled. They should be ordered separately and assembled by the customer.

* The Simple Specials System deals with product unification. Please contact your local sales representative for more details.

Γ	Assembly example
	① Residual pressure relief 3 port solenoid valve VP517Y-5DZ1 ········1 pc.
	② Air combination AC30C-03DG1 pc.
	③ Spacer with bracket Y300T-A1 pc.
	4 Spacer Y300-A1 pc.
	⑤ Piping adapter E300-03-A1 pc.

Applicable Combinations/Attachment Part Nos.

Residual pressure relief 3 port solenoid valve	Applicable air combination	Spacer	Spacer with bracket	Piping adapter	Silencer
VP517	AC25□-A, AC30□-A	Y300-A	Y300T-A	E300-□03-A	AN30-03 AN302-03
VP717	AC40□-A	Y400-A	Y400T-A	E400-□04-A	AN40-04 AN402-04

* Refer to page 3 for details of the spacer.



In the DIN terminal type, since a light is installed in the connector, DOZ and YOZ are not available.

Specifications

Fluid		Air	
Type of actuation		N.C.	
Internal pilot	Standard	0.2 to 0.7	
Operating pressure range [MPa]	High-pressure type	0.2 to 1	
Ambient and fluid temperature [°C]		-10 to 50 (No freezing)	
Maximum operating frequency [Hz]		5	
Manual override (Manual operation)		Non-locking push type Push-turn locking type (Manual) Non-locking push type (Manual)	
Pilot exhaust method		Individual exhaust	
Lubrication		Not required	
Mounting orientation		Unrestricted	
Impact/Vibration resistance [m/s²] *1		150/30	
Enclosure		IP65	

^{*1} Impact resistance: No malfunction occurred when it was tested in the axial direction and at right angles to the main valve and armature in both energized and deenergized states. Each condition was tested once. (Default settings) Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed in both energized and de-energized states in the axial direction and at right angles to the main valve and armature. (Default settings)

Solenoid Specifications

Electrical entry			DIN terminal (D) DIN terminal (Y) <en175301-803 (c)=""></en175301-803>		
			D, Y		
Cail material violations (N/I	DC		24, 12		
Coil rated voltage [V] AC		50/60 Hz)	100, 110, 200, 220		
Allowable voltage fluctuation		1	±10% of rated voltage*2		
Power consumption [W]	DC	Standard	0.35 (With light: 0.45)		
		100 V	0.78 (With light: 0.87)		
A		110 V [115 V]	0.86 (With light: 0.97) [0.94 (With light: 1.07)]		
Apparent power [VA]*1	AC	200 V	1.15 (With light: 1.30)		
		220 V [230 V]	1.27 (With light: 1.46) [1.39 (With light: 1.60)]		
Surge voltage suppressor			Varistor (DC)		
Indicator light			LED (DC), Neon bulb (AC)		

^{*1} The 110 VAC and 115 VAC are interchangeable. The 220 VAC and 230 VAC are interchangeable as well.

*2 The allowable voltage fluctuation is -15% to +5% of the rated voltage for the 115 VAC or 230 VAC.

Response Time/Weight

		Res			
Model	Pressure specifications	Without light/surge voltage suppressor	With light/surge voltage suppressor	AC	Weight [g]
VP517Y	Standard (0.2 to 0.7 MPa)	27	32	44	222
	High-pressure type (0.2 to 1.0 MPa)	41	48	44	(With bracket: 257)
VP717Y	Standard (0.2 to 0.7 MPa)	41	48	50	413
VP/1/Y	High-pressure type (0.2 to 1.0 MPa)	67	76	50	(With bracket: 468)


Flow Rate Characteristics

Model	Port size EXH.	Flow rate characteristics						
		1→2 (P→A)			2→3 (A→R)			
		C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv	
VP517Y	G3/8	8.8	0.14	2	8.2	0.15	1.8	
VP717Y	G1/2	13.8	0.11	2.9	12.9	0.18	2.9	




VP500/700 Series


Spacer

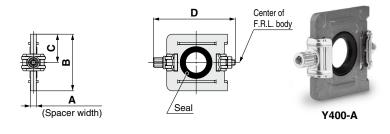

Model	Α	В	С	D	
Y300-A	4.2	43.4	21.7	57.9	
Y400-A	5.2	53	26.5	68.5	

Spacer with Bracket

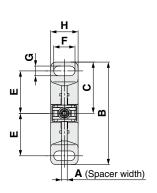

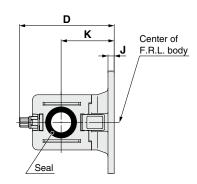




Y400T-A

Model	Α	В	С	D	Е	F	G	Н	J	K
Y300T-A	4.2	82	41	71.5	35	14	7	19	4	41
Y400T-A	5.2	96	48	86.1	40	18	9	26	5	50

Piping Adapter: 3/8, 1/2

A piping adapter allows installation/removal of the component without removing the piping and thus makes maintenance easier.








- *1 ☐ in model numbers indicates a pipe thread type. No indication is necessary for Rc; however, indicate N for NPT, and F for G.
- Separate spacers are required for modular units.

Silencer








Dimensions [r					
	Model	Port size R	Α	В	
	AN30-03	3/8	58.5	20	
	AN40-04	1/2	68	24	

High noise reduction type






Model	Port size	Dimensions [mm]		
	R	Α	В	
AN302-03	3/8	84	28	
AN402-04	1/2	95	34	


Dimensions


VP517

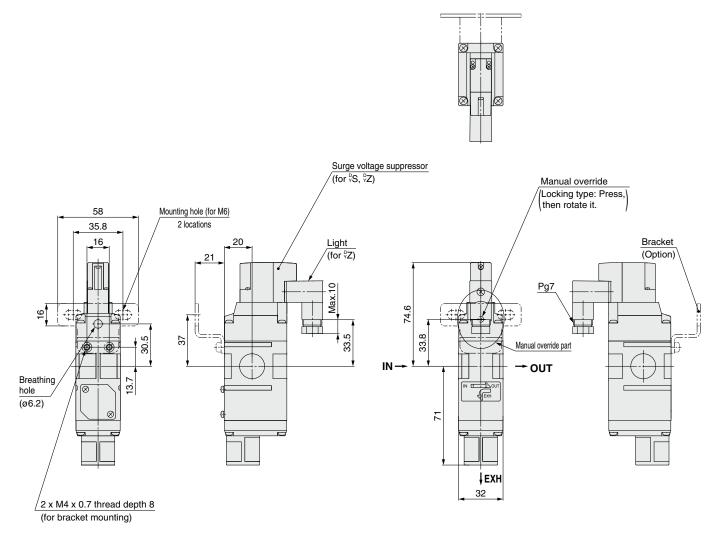


Details of manual override part (for manual operation)

Type A



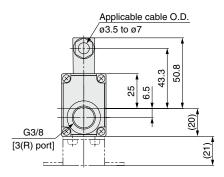

Type E







VP500/700 Series

Dimensions


VP717




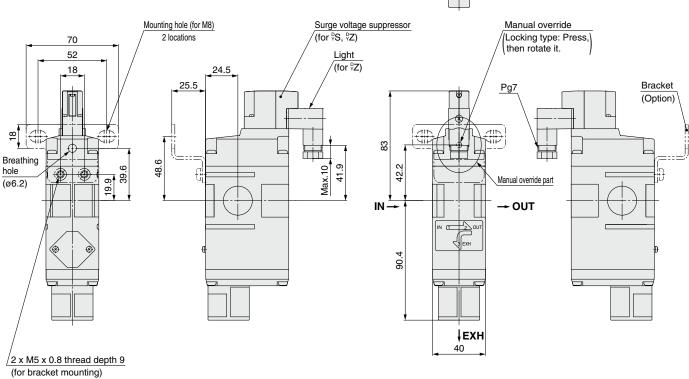

Details of manual override part (for manual operation)

Type A



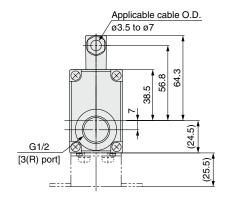

Type E

